




# Christmas Cheer™

rob and bob studio®



**Provo  
Craft®**

• Please note that the Cricut™ machine's cutting blade assembly is located in the bottom of your box, separate from the machine. Before you turn the machine on, you will need to insert the blade assembly. To do this, follow these simple instructions:



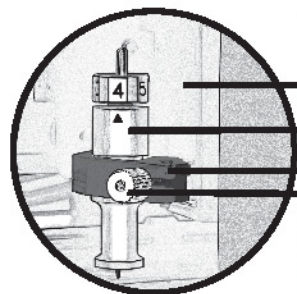


Car

Blade Assembly • L'Assemblage de la Lame

Cradle • Le Support

Thumbscrew • La Vis à Papillon

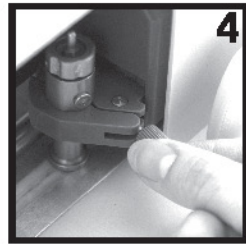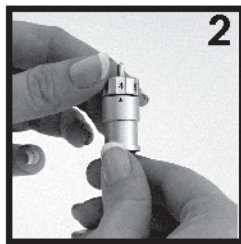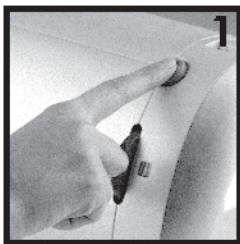

- 1) Press the power button on the Cricut™ machine. This will open the doors but will not turn the machine on because the cord is not plugged in.
- 2) Remove the cardboard inserts on either side of the car. Remove the green cutting blade assembly from its bag. Make sure the black arrow on the blade assembly points to the number 4 on the adjustment knob, and ensure that the cutting blade has been inserted into the assembly with the sharp end pointing down.
- 3) The blade assembly fits into the black cradle to the left of the car. Locate the silver thumbscrew and turn it counter-clockwise until it loosens enough that you can swing the thumbscrew to the right. Be careful not to loosen the screw too much, or it will fall out.
- 4) Open the left arm of the black cradle and position the cutting blade assembly inside, as shown. Close the cradle, swing the thumbscrew back to the left, and tighten it by turning it clockwise. Plug the machine in and press the power button to place the blade assembly in cutting position. Refer to the User Manual for detailed instructions about how to use your new Cricut™ machine.

Your Christmas Cheer™ cartridge package should include:



Cartridge



Keypad Overlay



Handbook

Content may vary slightly from illustrations shown.



Binder



**Christmas Cheer™**



The shapes and phrases on the Christmas Cheer™ cartridge were designed by:

rob and bob studio™



First of all, yes, Rob and Bob are our real names. But we share much more in common than just our rhyming names. We love color, contemporary design and pattern, combined with a touch of whimsy. The papercrafting market has allowed us to combine all these passions into one incredible line. We serendipitously came to the papercrafting industry seven years ago and it's been non-stop fun ever since.



Before our entrée into the scrapbook market, Rob was a professional illustrator living in New York and Bob was an art director in the advertising field. Bored with our lives of glamour and style in the Big Apple, we became restless, looking for something new and different. We found it in the wonderful, wacky world of scrapbooking. We hope you have as much fun creating with our art as we had designing it. We believe that our art truly comes to life in the hands of creative people like you.


Rob and Bob design for a wide range of products including home décor, stationery, and gifts. They divide their time between Southern California and New York City (depending on the weather and the size of the waves).

This simple orientation will help you get started with Cricut™ cartridges.

TIP: For more detailed instructions, refer to the User Manual included with your Cricut™ machine.



1. Plug in and turn on your Cricut™ machine. Place the Keypad Overlay on the Cricut™ keypad.

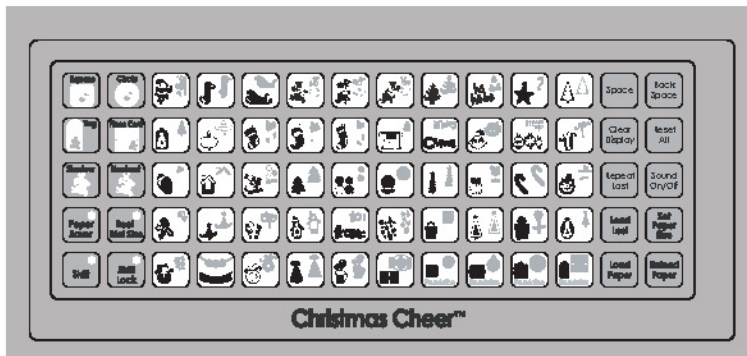



## 2. Insert the cartridge.

TIP: It is recommended that you turn your Cricut™ machine off before removing a cartridge, and that you wait to turn it back on until after inserting a new cartridge.



## 3. Prepare the Cutting Mat.

Tip: The surface of the mat has been treated to make it slightly tacky.

A. Remove the clear plastic cover.


B. Place a 6" x 12" sheet of paper on the Cutting Mat. Press and smooth from the center to the edges of the mat.

C. Gently press paper and mat against the roller bar.  
(You will feel a slight resistance.)



#### 4. Press the **Load Paper** key.

The paper will be pulled into the Cricut™ machine.

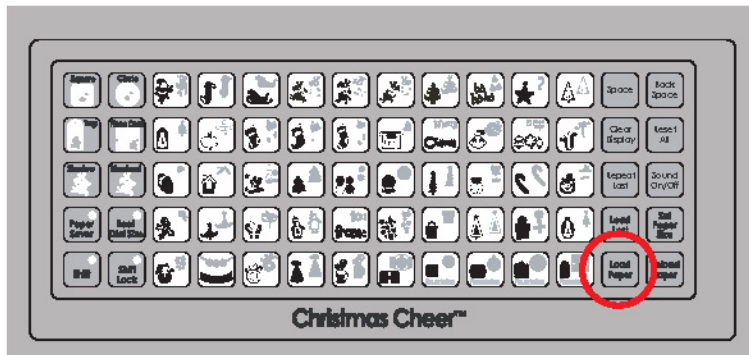

TIP: Your Cricut™ machine needs 12" of clear space in the front and back for paper movement in and out of the Cricut™ machine. If your paper does not load correctly, press the **Unload Paper** key and try again.





## 5. Select shapes or phrases you want to cut.

(You can select up to 16 shapes or phrases. They will be displayed on the LCD screen above the keypad.)



## 6. Select size.

Roll the Size Dial on the right-hand side of the Cricut™ machine until the desired size appears in the LCD screen. For example, if the LCD screen displays 3", your shape or phrase will be cut 3" tall.

**TIP:** For detailed instructions and advanced applications refer to the Creative Features section of this handbook.





7. Press the **CUT** button.

TIP: Only one size may be selected per cut, and that size will be applied to all characters on the LCD screen when you press **CUT**.

8. Press the **Unload Paper** key.

The paper and mat will be ejected from the Cricut™ machine.

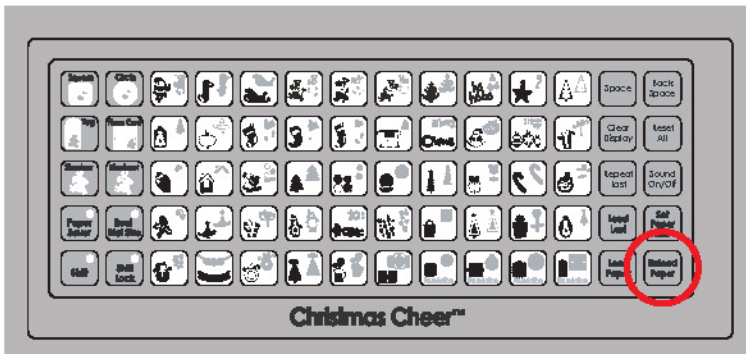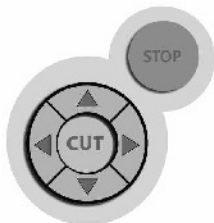



## 9. Remove paper from Cutting Mat.

TIP: Cricut™ Tools are available to help you remove your cuts from the Cutting Mat.


The capabilities of your Cricut™ Personal Electronic Cutter™ are very broad and versatile!

The next section, Creative Features, will introduce some of the exciting advanced techniques available to you.

TIP: We suggest that you practice on less expensive paper first, until your expected results are consistent.

## Important Keys and Buttons

These will help you with advanced cuts.

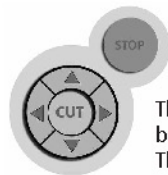

The **STOP** button adjacent to the **CUT** button will stop any operation in progress. The **Blade Navigation Buttons** move the blade to any location on the paper.



Automatically arranges your selections to minimize paper waste



Cuts each shape or phrase in the literal size selected



Allows a shape or phrase on the upper right corner of a key to be selected



Allows repeated selection of shapes or phrases on the upper right corner of a key



Enters an empty space



Clears the contents of the LCD screen



Inserts the last selections that were cut onto the LCD screen



Returns cutting blade automatically to where the previous cut ended



Pulls the paper and mat into the Cricut™ machine



Deletes the last entered selection



Clears the display and resets the Cricut™ machine to default settings



Turns the chirp on or off



Use with paper sizes smaller than 6" x 12"




Ejects the paper and mat from the Cricut™ machine

## Selecting Shapes and Phrases

How to Use the Shift and Shift Lock Keys



To select a shape or phrase from the upper right corner of a key, use the Shift key on the keypad. You don't need to hold it down. Just press Shift once and make your selection.

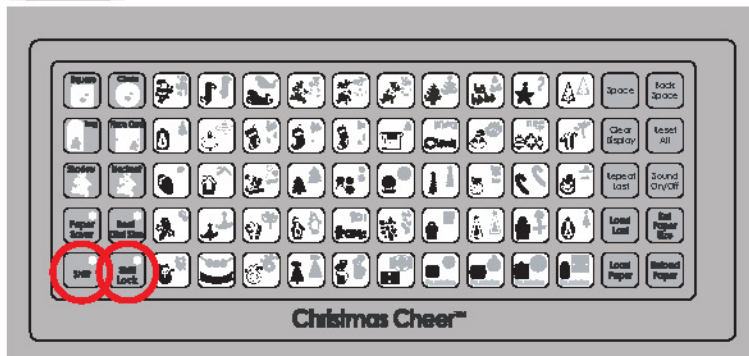

Use the Shift Lock key to select more than one shape or phrase at a time from the upper right corners of keys. Press the Shift Lock key again to deselect it.

## What Is Real Dial Size?



Layer

Layer




Real Dial Size OFF



Real Dial Size ON

All characters are measured from the lowest possible point to the highest possible point. In Christmas Cheer™, all black (non-shifted) characters are created at the same height. The grey (shifted) characters are layers that fit proportionately to the black characters. If **Real Dial Size** is selected all characters will be cut according to the selected dial size instead of fitting proportionately.

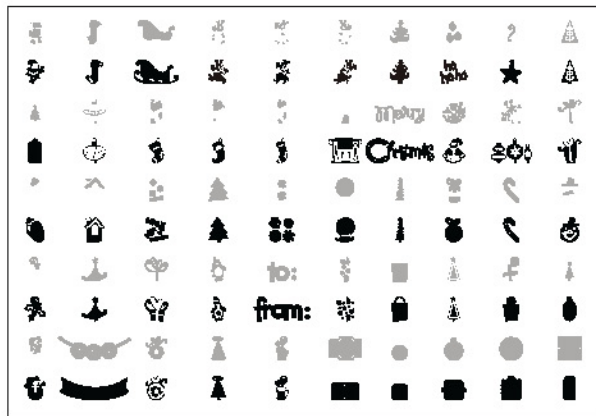


## What Are Creative Feature Keys?

The top three pairs of keys on the left panel are reserved for the Creative Feature effects of each set. These Features vary with each specific cartridge, providing greater versatility and thousands of options!

The Creative Feature keys included on the Christmas Cheer™ cartridge are **Square**, **Circle**, **Tag**, **Place Card**, **Shadow** and **Blackout**.


To use a Creative Feature key, just select it prior to pressing the CUT button. The shapes or phrases displayed on the LCD screen will then be cut in the style of the selected Creative Feature. Due to their sizes and shapes, a Feature may not work with all shapes. Please refer to the Icon Gallery for Creative Feature details.

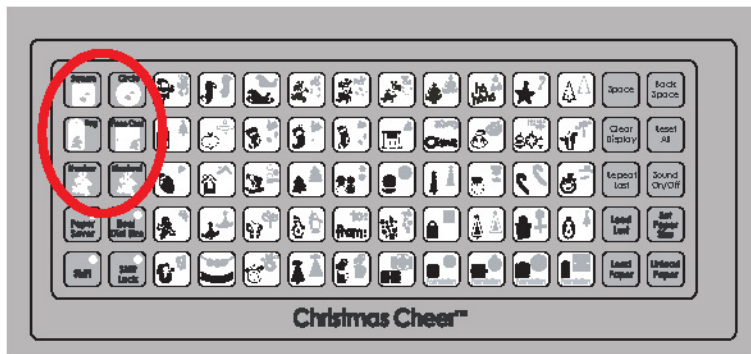

**TIP:** A Feature can be selected before or after a shape or phrase has been selected, but before the CUT button is pressed. Once pressed, a Feature key will remain lit until it is turned off in one of the following ways: the Feature key is pressed a second time, the **Reset All** key is pressed, or a different Feature is selected. Only one Creative Feature key can be selected for each cut, and that Feature will be applied to all characters on the LCD screen.

## What Is a Foundation Key?

Your Christmas Cheer™ cartridge contains four Foundation keys with two shapes on each key. Foundation shapes are the solid version of images that were used as Creative Features, or proportional images that Creative Feature keys can be used with. These proportional images are Foundation/Companion shapes. Foundation Shapes and Foundation/Companion shapes can be used alone or as layers using the Creative Feature keys. They can also be enhanced by combining them with shapes or phrases.

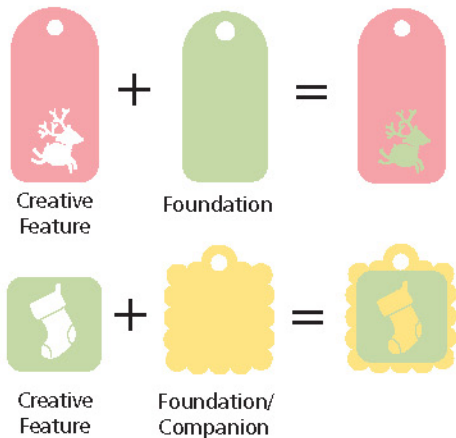



Frequently Asked Questions (For updated information about the Cricut™ Personal Electronic Cutter™ visit [www.cricut.com](http://www.cricut.com))

How does the Cricut™ machine work and what size images can it cut?

The Cricut™ Personal Electronic Cutter™ is a cartridge-based cutting system. The blade is guided by an electronic cutting process. The Cricut™ machine cuts letters, shapes, and phrases ranging from 1" to 5 1/2" tall, as well as titles and borders as long as 11".

What kind of paper can the Cricut™ machine cut?

The Cricut™ Personal Electronic Cutter™ can cut a wide range of paper from vellum to cardstock up to 0.5 mm thick. Provo Craft has created cardstock pads and designer paper pads that coordinate with the Cricut™ shape cartridges. These papers fit perfectly in the Cricut™ machine.

Will I waste paper trying to get just a few images cut?

No. The Cricut™ machine has an option called Paper Saver that cuts letters, shapes, and phrases in an arrangement that minimizes the amount of waste from every cut.

Do I have to hold down the **Shift** key to use it?

No. Just press it down once and it will be backlit in green, indicating that it is in use.

Are the Creative Features the same for each cartridge?

Only the Shadow Feature is the same for each set. The other five Creative Features are unique to each individual cartridge.

How long will the cutting blade last?

Anywhere from 500 to 1500 cuts, depending on what kind of paper/cardstock you use. Replacement blades are inexpensive and easy to change. Refer to the "Replacing the Cutting Blade" section in the Cricut™ User Manual.

How long will the Cutting Mat last?

Between 25 and 40 full-page cuts, depending on the size of the cuts and what kind of paper/cardstock you use. We recommend that you use several mats, rotating them often. This will extend the overall life of each mat.

Frequently Asked Questions (For updated information about the Cricut™ Personal Electronic Cutter™ visit [www.cricut.com](http://www.cricut.com))

Can I use paper smaller than 6" x 12"?

Absolutely! Just align a corner of the smaller paper to the bottom left corner of the Cutting Mat. Once the mat is loaded, use the Blade Navigation Buttons to move the cutting blade down to the upper right corner of the paper. Then press **Set Paper Size** on the keypad overlay.

Do I have to finish cutting a full page before unloading?

No. You can unload the paper and remove just the pieces you need. You can then reload the paper at a later time and navigate to any open area to resume cutting. If you immediately use the same paper for your next cut, press the **Load Last** key instead of **Load Paper**. This will automatically return the cutting head to the last place it was cutting from.

What is the Paper Saver mode?

**Paper Saver** adjusts images upward or downward to minimize paper waste. This may result in an inaccurate "negative" shape left in the paper, but if you don't need to use the negative cut, this function works great. EXAMPLE: The tail on a lowercase "y" usually extends into the paper below the rest of the letters selected, indicating accurate readability. With **Paper Saver** selected, your Cricut™ machine will automatically raise the "y" up so that the tail doesn't extend below the baseline of the other letters.

What does Real Dial Size do?

By default, your Cricut™ machine will cut characters in proportion to each other. However, if you want to "break" this proportion and get any character to cut at the literal dial size, press the **Real Dial Size** key. EXAMPLE: With the Size Dial set at 2", a lowercase "a" will actually cut out at approximately 1" to fit proportionately with any other cut letter. With **Real Dial Size** selected, that same "a" would cut at a full 2".

How is a letter, shape, or phrase cut measured? From the lowest possible point to the highest possible point.

What is the best way to transport my Cricut™ machine? The Cricut™ machine weighs only 9 lbs. and is easily transported.

A specially designed tote is available with handy pockets and soft-touch zipper closures. It has in-line wheels for easy maneuvering and a pull-up handle. It is well padded to protect your Cricut™ machine.

**Troubleshooting** (For updated information about the Cricut™ Personal Electronic Cutter™ visit [www.cricut.com](http://www.cricut.com))

**Problem:** The Cutting Mat won't load when I press the **Load Paper** key.

**Solution:** Try pressing the mat slightly into the roller bar as you press the **Load Paper** key.

**Problem:** The mat didn't load when I pressed **Load Paper**. Now, when I try to press it again, it doesn't do anything.

**Solution:** You need to press **Unload Paper** first. Your Cricut™ machine "thought" that it loaded the mat, even though it didn't pull it in. So it needs to be given the command to unload before another paper load attempt is made. Pressing the **Unload Paper** key will reset the roller bar, allowing for another paper load attempt.

**Problem:** The blade is not cutting all the way through the paper.

**Possible Solution 1:** Increase the cut pressure using the Pressure Dial on the left side of the Cricut™ machine.

**Possible Solution 2:** Adjust the blade depth. This may be necessary if you are trying to cut through thicker stock. Refer to the "Adjusting Blade Depth" section in the Cricut™ User Manual.

**Possible Solution 3:** The cutting blade may be dulled by use. Refer to the "Replacing the Cutting Blade" section in the Cricut™ User Manual.

**Problem:** I can't get a letter, shape, or phrase to cut with the Creative Feature selected.

**Solution:** Refer to the Icon Gallery to see which Features work with which letters, shapes, and phrases.

**Troubleshooting** (For updated information about the Cricut™ Personal Electronic Cutter™ visit [www.cricut.com](http://www.cricut.com))

**Problem:** The paper lifts off the mat as the Cricut™ machine is cutting.

**Possible Solution 1:** Make sure you press the paper firmly onto the Cutting Mat when setting up the cut.

**Possible Solution 2:** Try using a new mat. Each mat will last between 25 and 40 full-page cuts, depending on the size of cuts and the kind of paper/cardstock that you use.

**Problem:** The mat is too sticky. It's ripping the paper when I try to remove it.

**Solution:** Use a craft knife or the Cricut™ Tools (packaged as separate products) to successfully lift the paper/cardstock from the mat. (These are custom tools designed for lifting, pulling, or cleaning up the cut images.)

**Problem:** I've put a smaller sized paper on the mat and navigated the blade to the upper right corner, but when I cut a line of letters, the blade returns and starts cutting back at the top of the mat.

**Solution:** After you've navigated the blade to the upper right corner of the paper, and prior to pressing CUT, you need to press the **Set Paper Size** key. This will tell your Cricut™ machine that you have selected a smaller paper size. Otherwise it "thinks" that a 6" x 12" paper is loaded.

Now you're ready to try a project!



## Merry Christmas Card

Christmas is the perfect time of year to make personalized cards and gifts for your family and friends. Our Christmas Cheer™ cartridge is full of whimsical artwork that will make gift giving more fun than ever before. To make this bright, cheerful holiday card, follow these simple instructions.

### Materials:

- Printed paper: lime green
- Cardstock: light red, medium red, white, lime green
- Red string or cording, ribbon
- Metal charm
- Foam squares
- Glue

### Step One:

Hand-cut a 9 1/2" x 9 1/2" square of lime green patterned paper. Hand-cut an 8 1/2" x 8 1/2" square of white paper. Attach the white square to the center-left edge of the lime green square, and fold in half to form a card. Hand-cut a 2" x 7 1/2" rectangle of light red cardstock. Adhere it across the front of the card approximately 1/4" from the bottom and flush with the right side.



**Step Two:**

Cut one 3 1/2" "Merry" from medium red cardstock. Adhere to the white cardstock, flush with the right edge.

**Step Three:**

Cut two 2 1/2" "Christmas" from lime green cardstock. Cut one 2 1/2" "Christmas" from light red cardstock using the **Blackout** Feature.



**Step Four:**

Trim the "C" from the light red cardstock and adhere behind the lime green "Christmas." Adhere to card centered on the red rectangle.

**Step Five:**

Cut the triangle tree from the other lime green "Christmas." Wrap red string or cording around the green triangle. Attach onto the card with foam squares on top of the other tree.



**Step Six:**

 
Choose a coordinating metal charm, tie a ribbon onto it, and adhere it along the left side of the card.

In the Icon Gallery, you will find a diagram for every shape and phrase on your cartridge. The color change indicates that the image on the upper right is created using the **Shift** key and the image on the lower left is created without **Shift**. Using the Icon Gallery, you can see at a glance which Creative Features are available to use with the shape or phrase that you have selected.

You will find that some shapes and phrases are very detailed and cut better at a larger dial size.

Christmas Cheer™ Creative Features:


Square  
Circle  
Tag  
Place Card  
Shadow  
Blackout

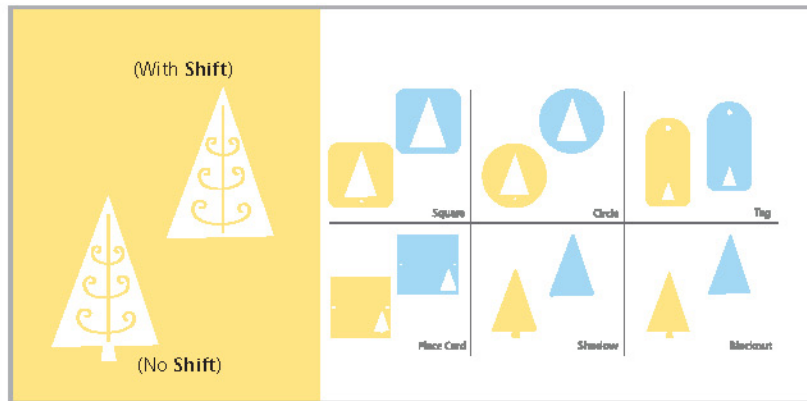







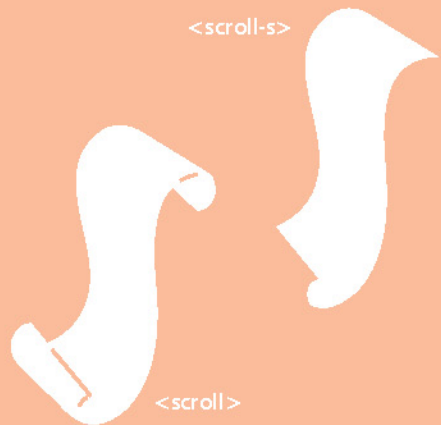

|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>Shadow</p>                      | <p>Blackout</p>                 |





|  |  |   |
|--|--|---|
| <p>Not Available</p>  <p>Square</p>     | <p>Not Available</p>  <p>Circle</p> | <p>Not Available</p>  <p>Tag</p> |
| <p>Not Available</p>  <p>Place Card</p> | <p>Shadow</p>                       | <p>Blackout</p>                  |

<sleigh-s>



<sleigh>



Not Available



Square

Not Available



Circle

Not Available



Tag

Not Available



Place Card




Shadow





Blackout



|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>Shadow</p>                      | <p>Blackout</p>                 |

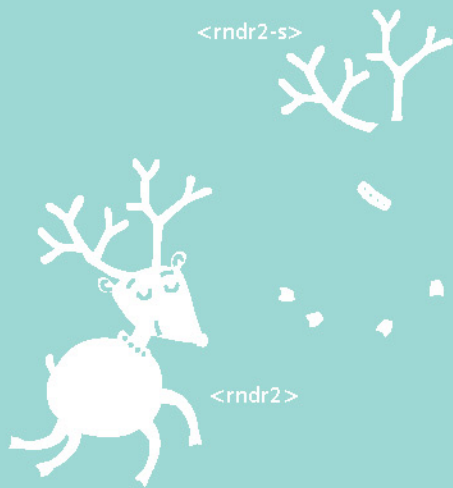

|  |  |  |
|--|--|--|
| <p>Not Available</p>  <p>Square</p>     | <p>Not Available</p>  <p>Circle</p> | <p>Not Available</p>  <p>Tag</p>      |
| <p>Not Available</p>  <p>Place Card</p> | <p>Not Available</p>  <p>Shadow</p> | <p>Not Available</p>  <p>Blackout</p> |

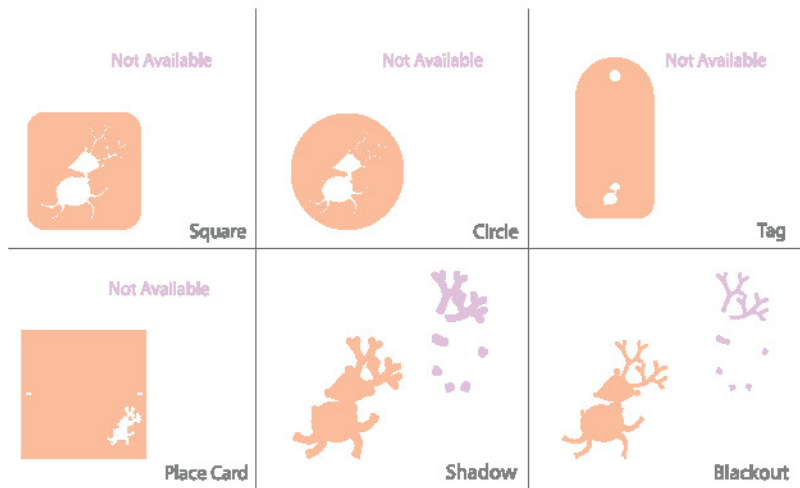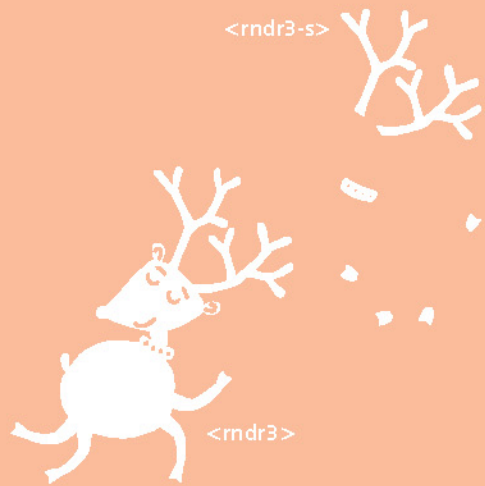



Square



Circle



Tag




Place Card



Shadow




Blackout

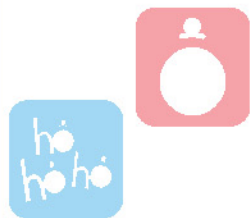


Square



Circle

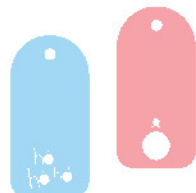

Tag

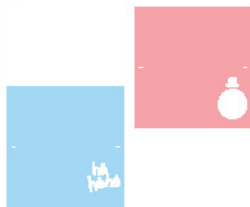


Place Card



Shadow






Blackout


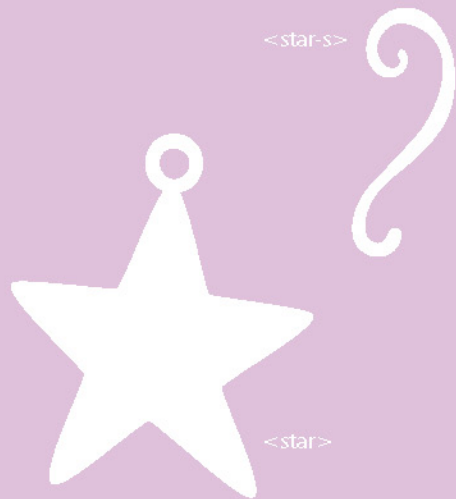


|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>?</p> <p>Shadow</p>             | <p>?</p> <p>Blackout</p>        |



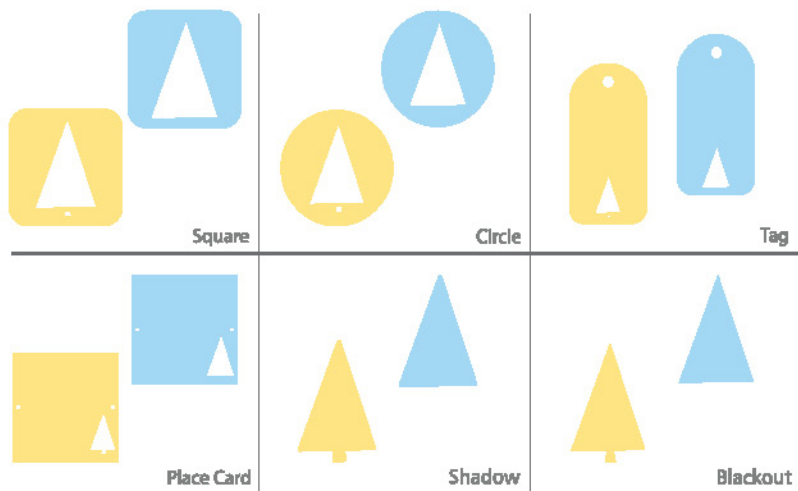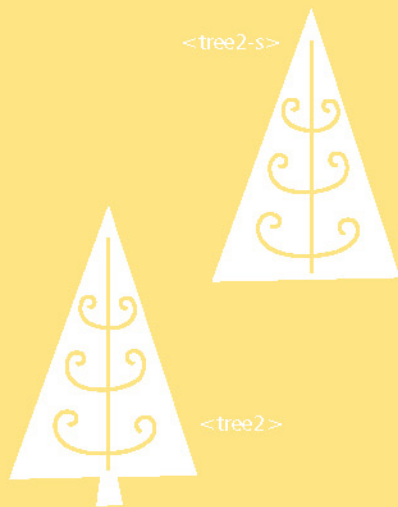

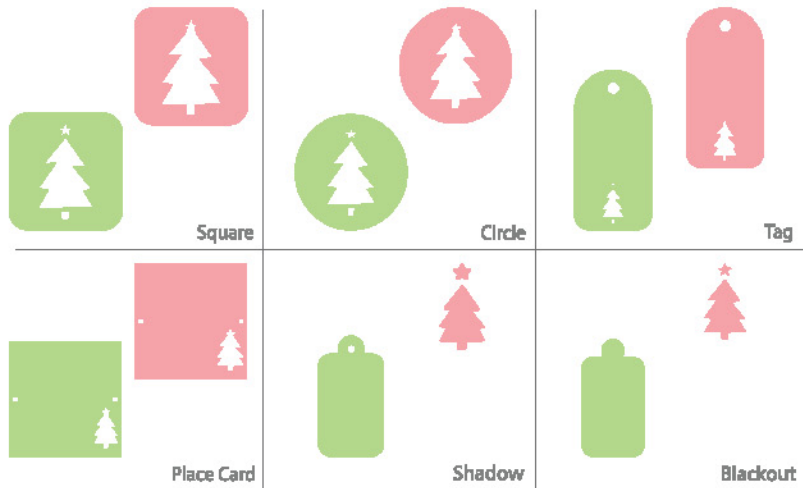

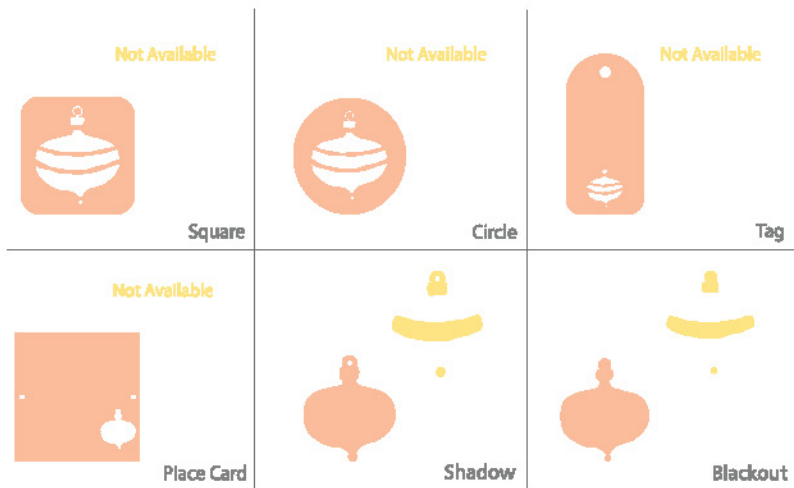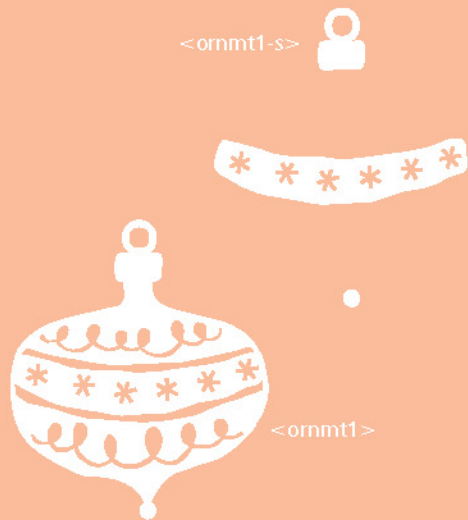



|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>Shadow</p>                      | <p>Blackout</p>                 |





|  |  |   |
|--|--|---|
| <p>Not Available</p>  <p>Square</p>     | <p>Not Available</p>  <p>Circle</p> | <p>Not Available</p>  <p>Tag</p> |
| <p>Not Available</p>  <p>Place Card</p> | <p>Shadow</p>                       | <p>Blackout</p>                  |

<hearth-s>



<hearth>



Square



Circle



Tag



Place Card



Shadow



Blackout



Merry  
<merry>

Christmas  
<christms>



Square



Circle



Tag



Place Card










Shadow

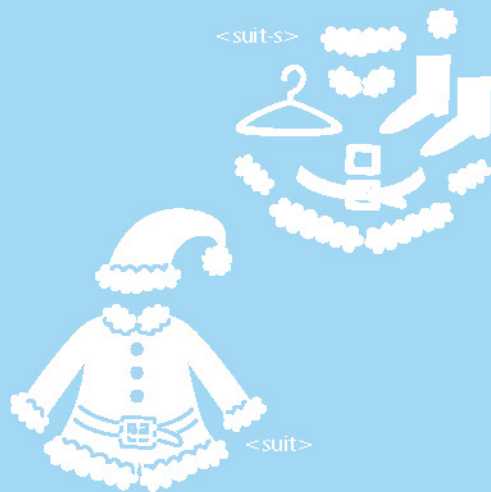




Blackout



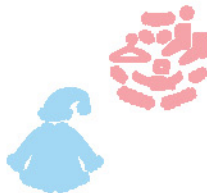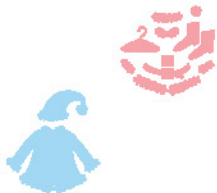

|  |  |   |
|--|--|---|
| <p>Not Available</p>  <p>Square</p>     | <p>Not Available</p>  <p>Circle</p> | <p>Not Available</p>  <p>Tag</p> |
| <p>Not Available</p>  <p>Place Card</p> |  <p>Shadow</p>                      |  <p>Blackout</p>                 |

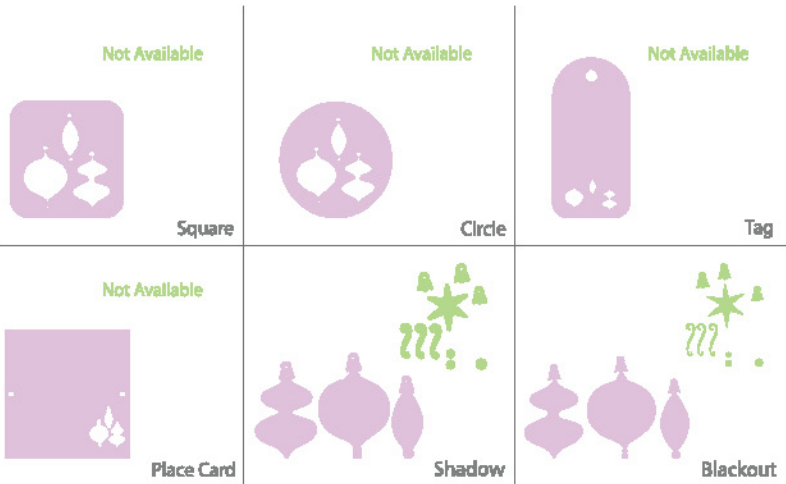

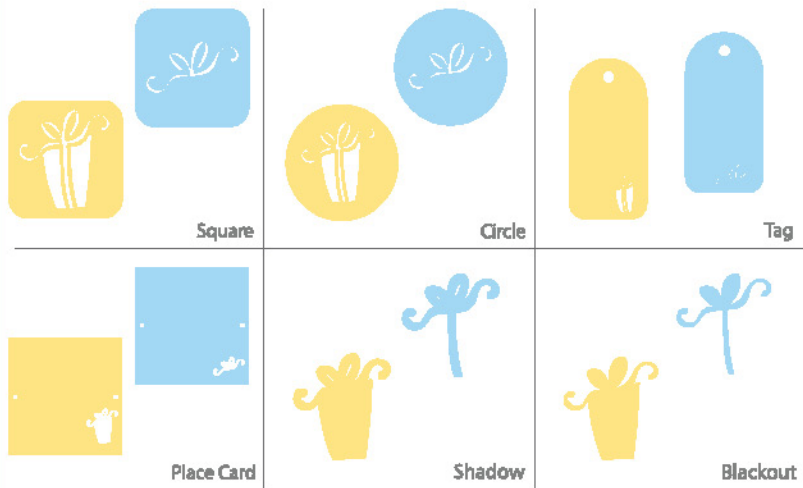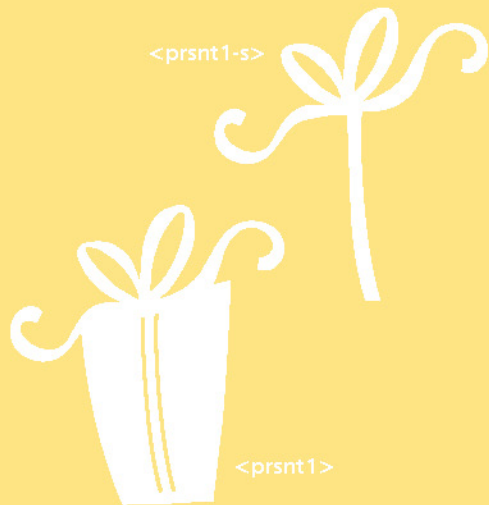

<bulb-s>



<bulb>

Not Available



Square

Not Available



Circle

Not Available



Tag

Not Available



Place Card




Shadow






Blackout



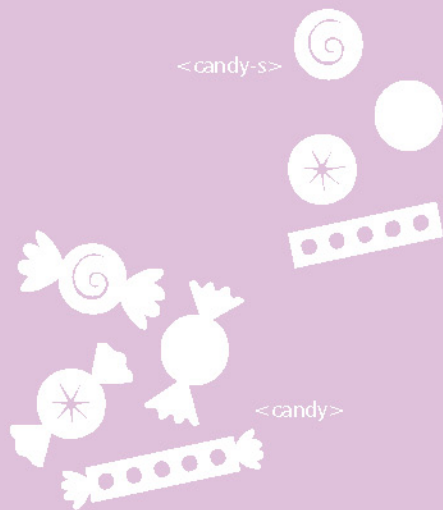


|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>Shadow</p>                      | <p>Blackout</p>                 |

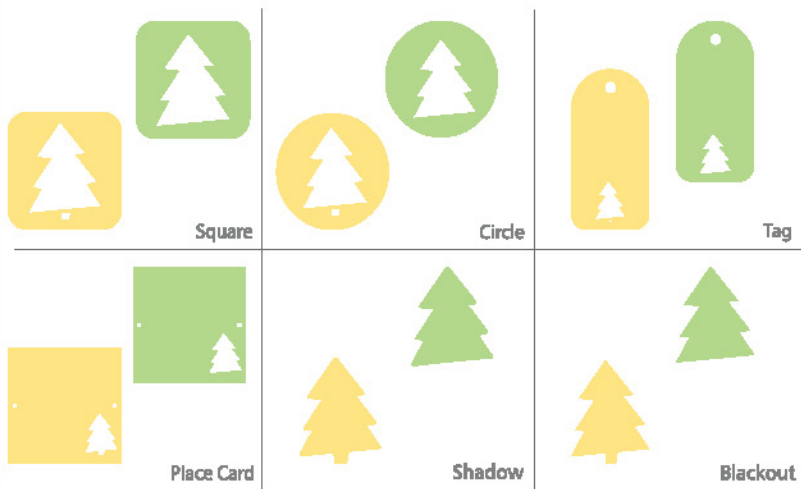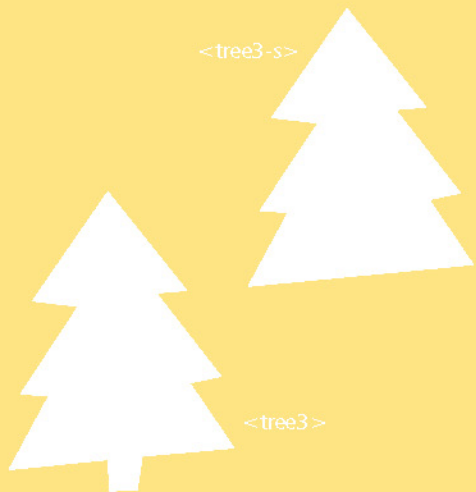

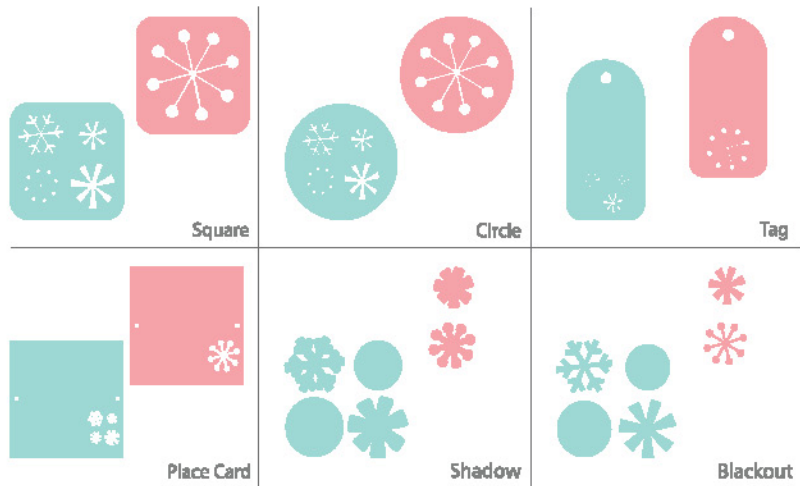





<globe-s>

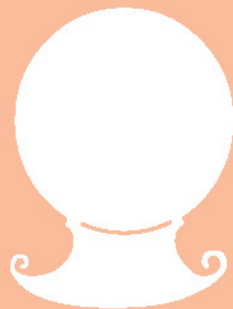


<globe>

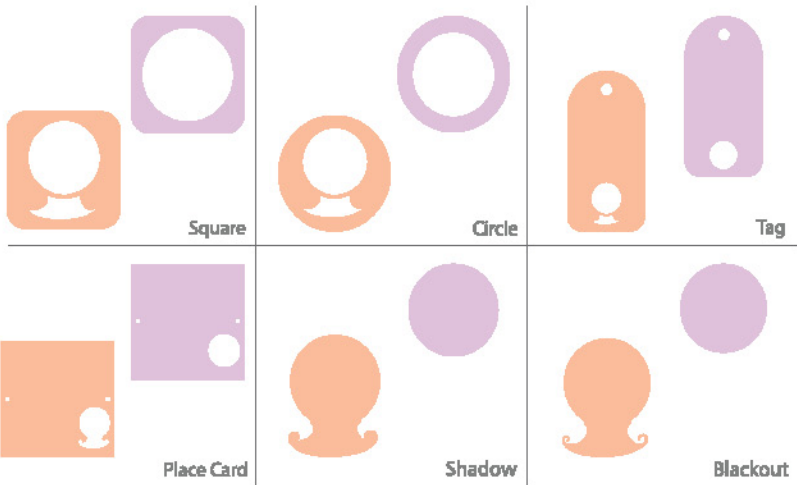

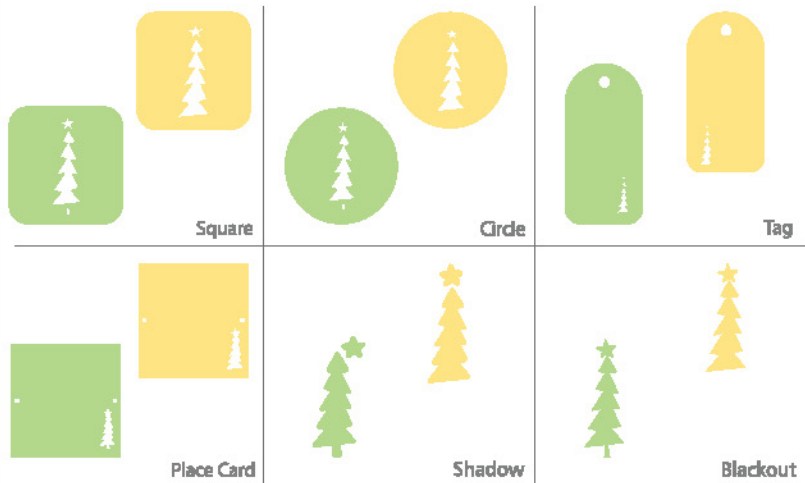

<ornmt2-s>

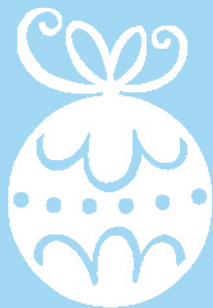

<ornmt2>



Square



Circle



Tag



Place Card



Shadow




Blackout





<cn<sup>d</sup>ycn-s>







<cn<sup>d</sup>ycn>

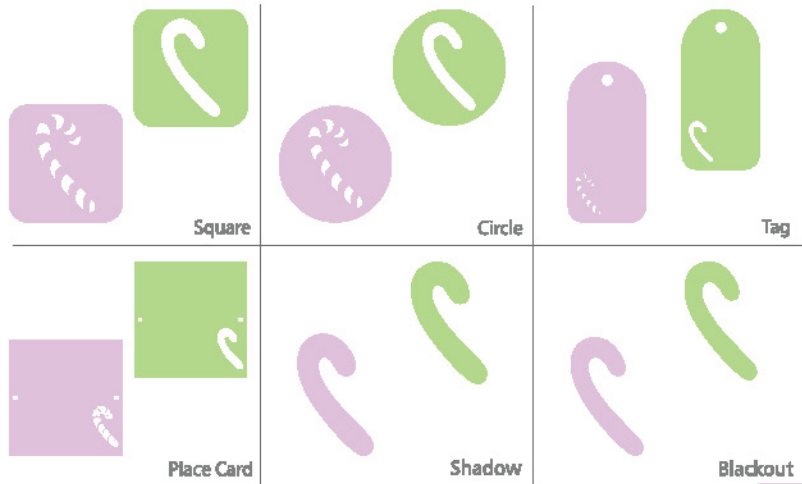



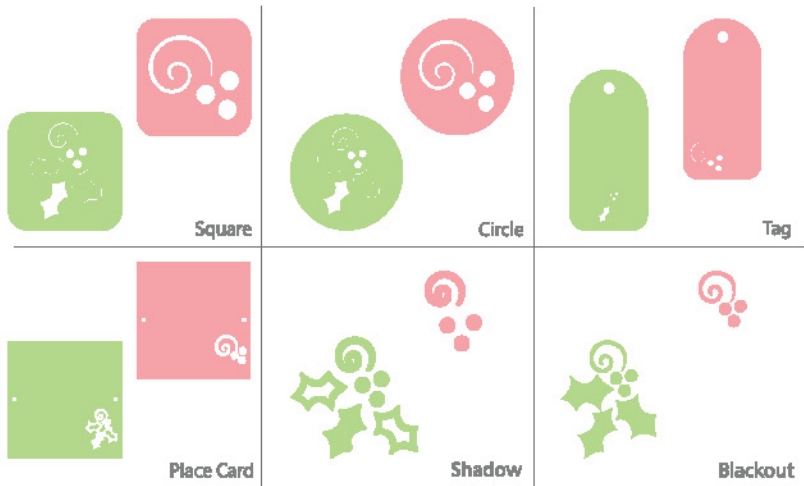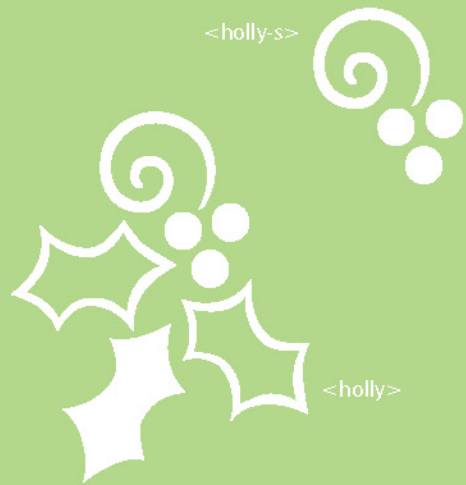

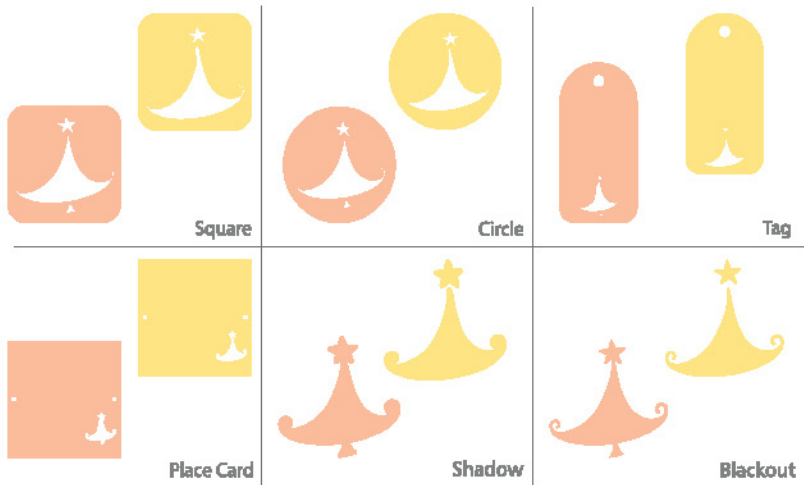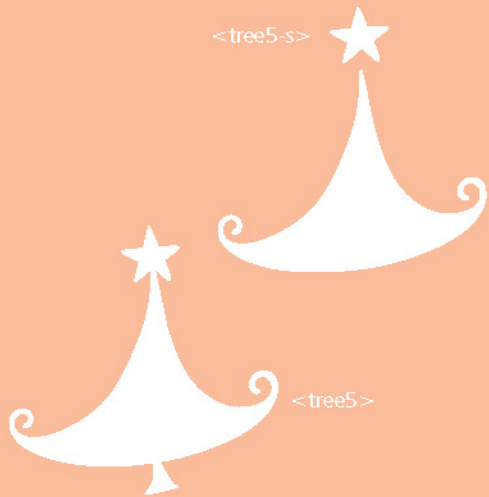

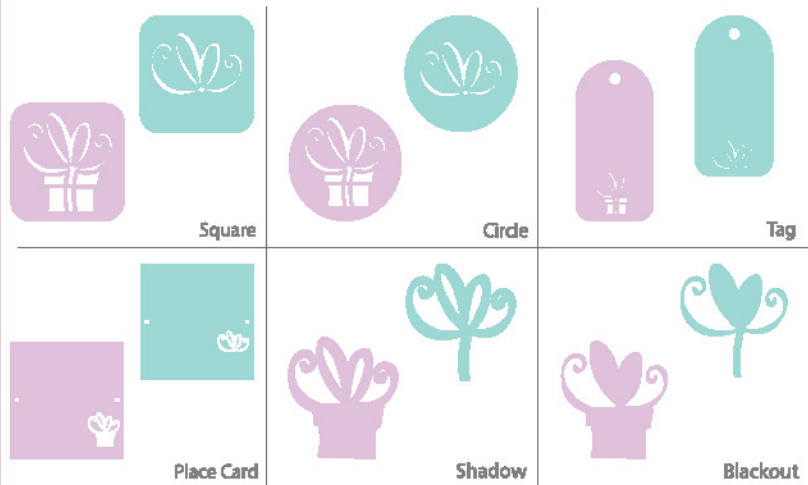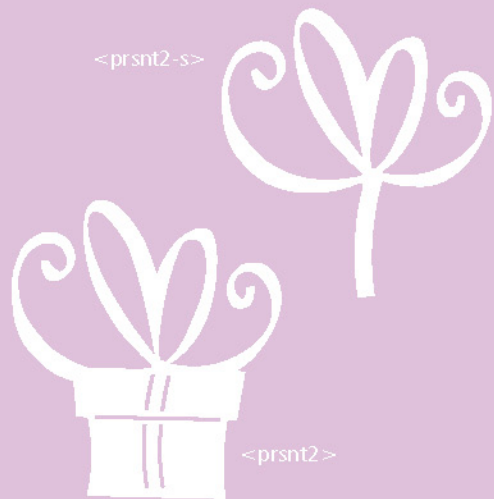







|  |  |   |
|--|--|---|
| <p>Not Available</p>  <p>Square</p>     | <p>Not Available</p>  <p>Circle</p> | <p>Not Available</p>  <p>Tag</p> |
| <p>Not Available</p>  <p>Place Card</p> |  <p>Shadow</p>                      |  <p>Blackout</p>                 |


<to>  
to:  
  
<from>  
from:

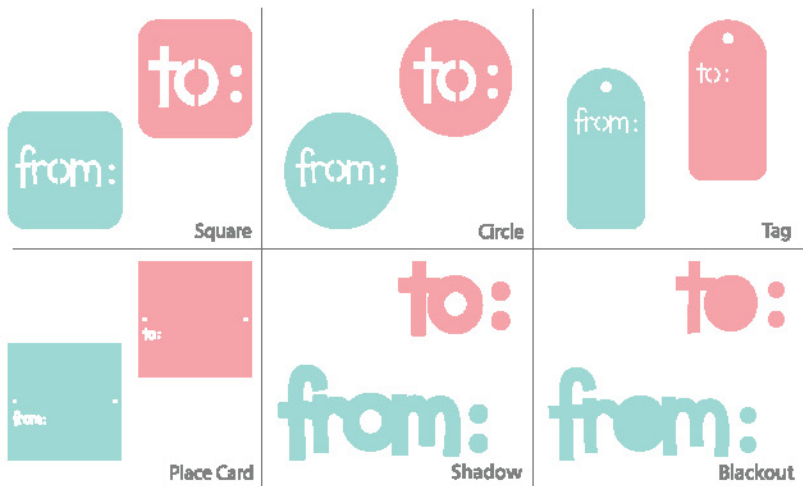

<cnftti-s>

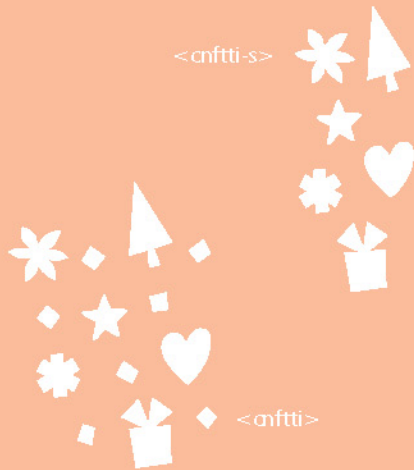

<cnftti>

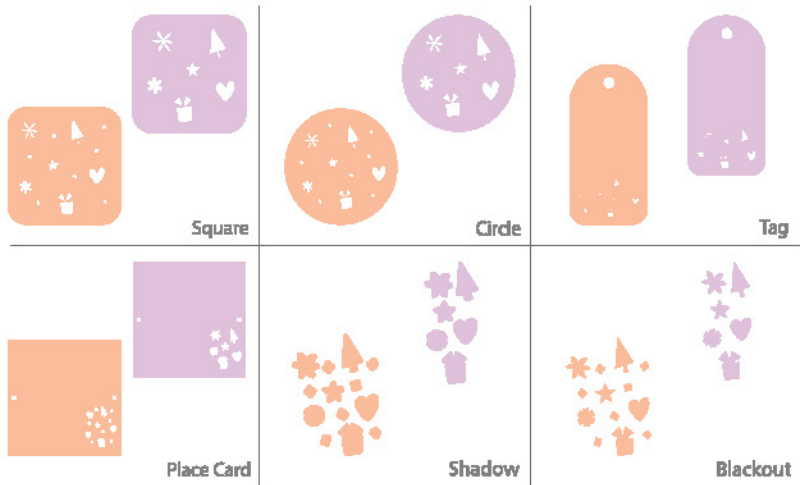

<bag-s>



<bag>



Not Available



Square

Not Available



Circle

Not Available



Tag

Not Available





Place Card




Shadow





Blackout

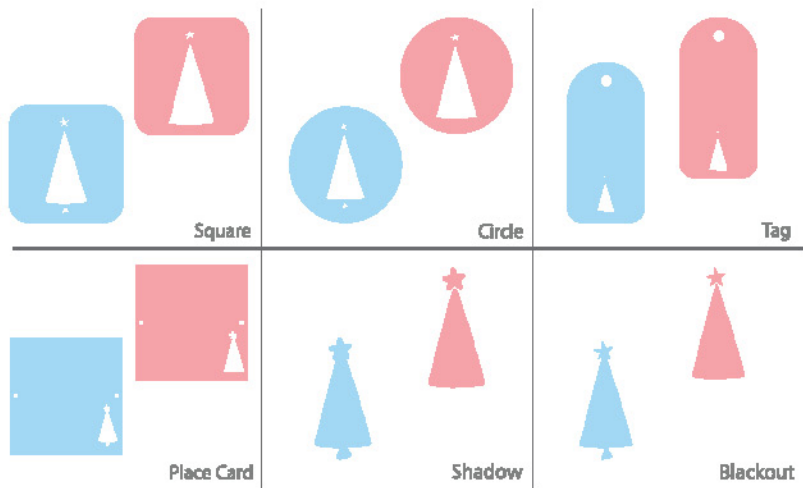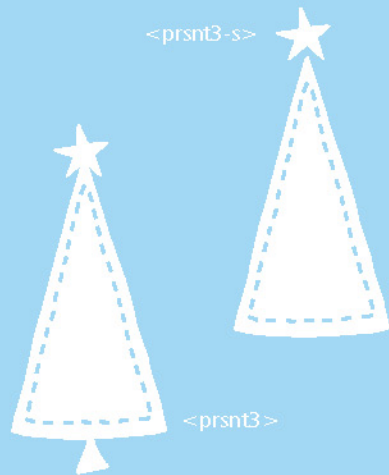

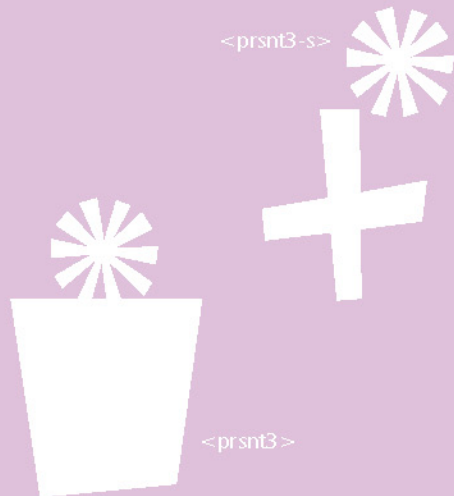

|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>Shadow</p>                      | <p>Blackout</p>                 |

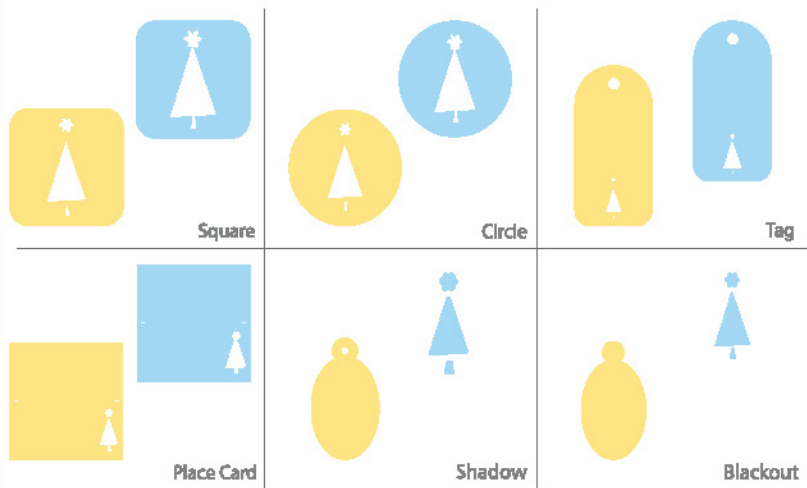

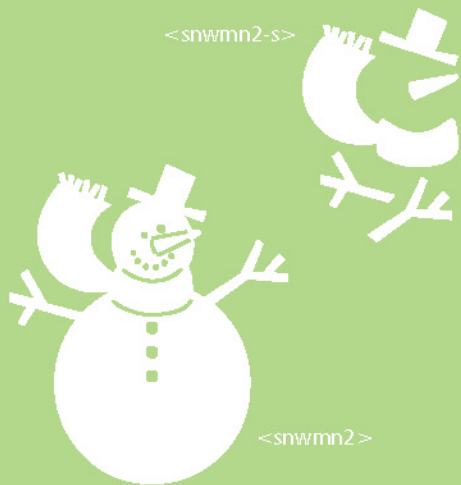

|  |                                    |                                 |
|--|------------------------------------|---------------------------------|
| <p>Not Available</p> <p>Square</p>     | <p>Not Available</p> <p>Circle</p> | <p>Not Available</p> <p>Tag</p> |
| <p>Not Available</p> <p>Place Card</p> | <p>Shadow</p>                      | <p>Blackout</p>                 |





<banner-s>



<banner>



Square



Circle



Tag



Place Card



Shadow





Blackout


<wreath-s>




<wreath>

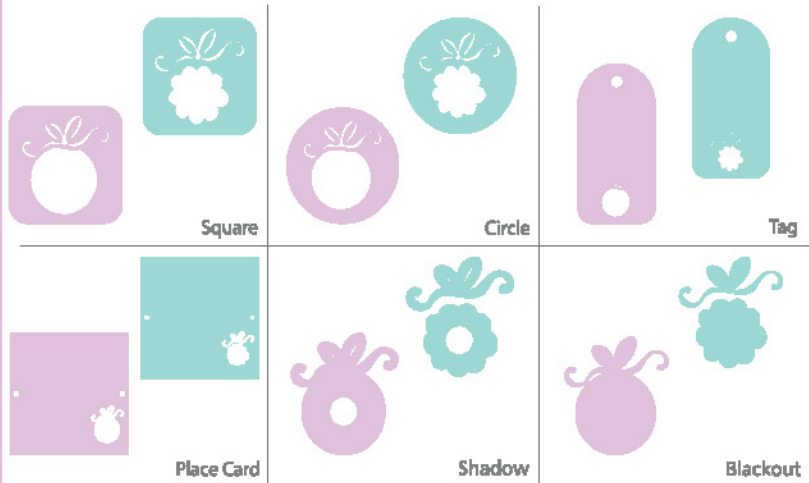

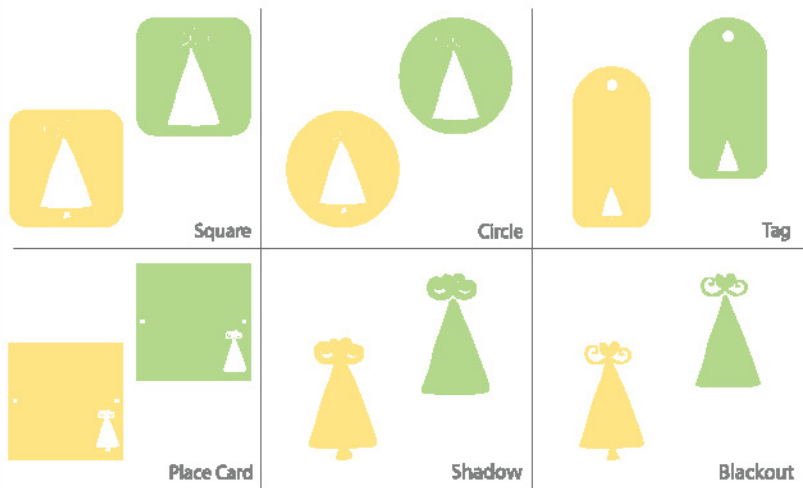

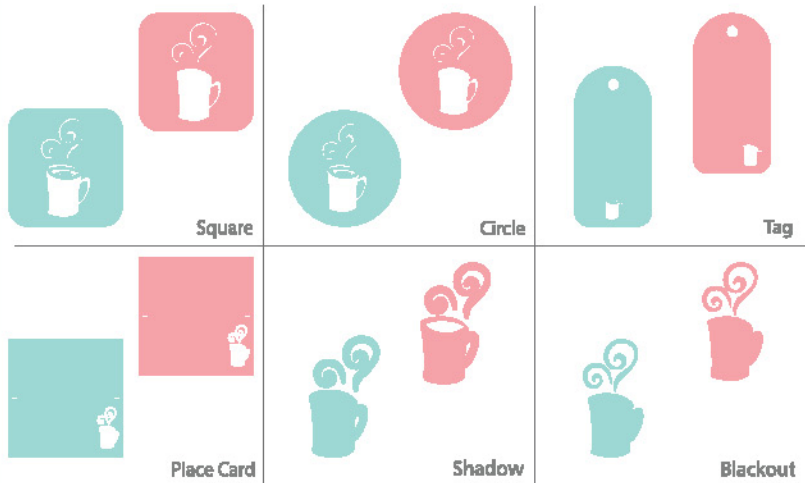

<envelope>

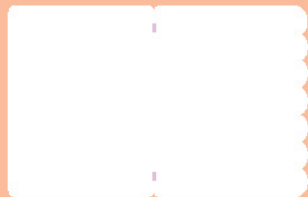

<card>

Not Available



Square

Not Available



Circle

Not Available



Tag

Not Available



Place Card



Shadow






Blackout

<circle>



<square>

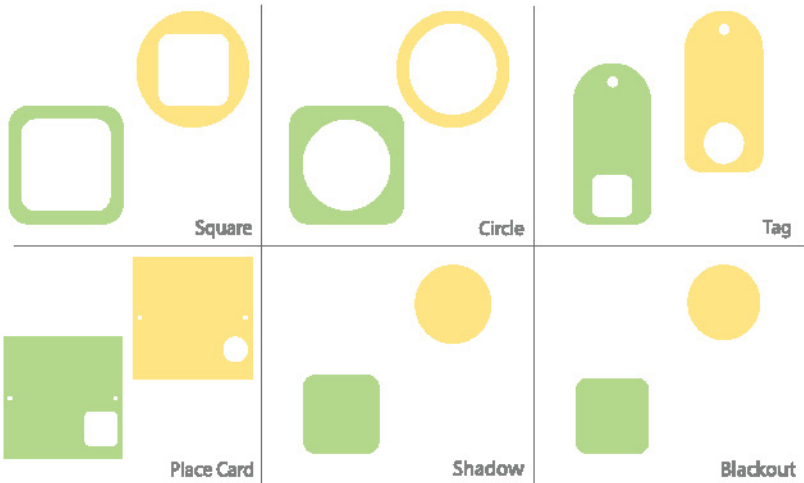


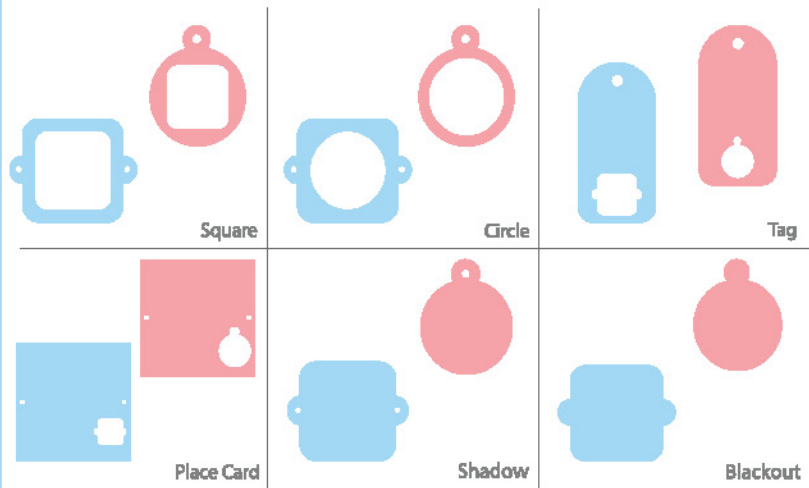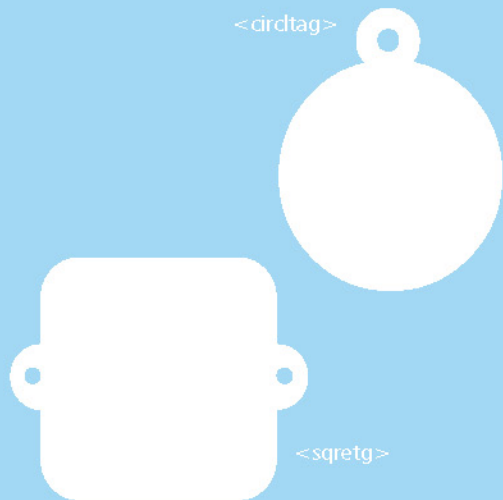


<sltdcrd>




<scaloptg>

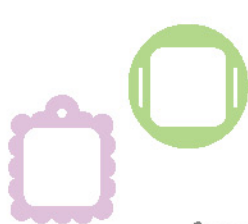

Square

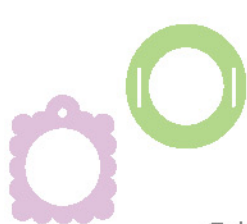


Circle

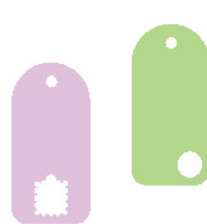


Tag



Place Card

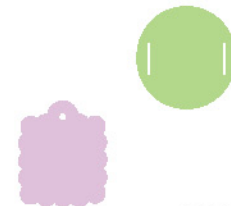


Shadow

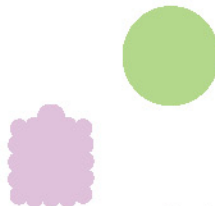


Blackout



<placecrd>

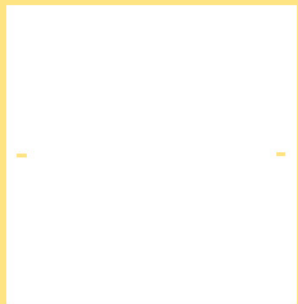

<tag>

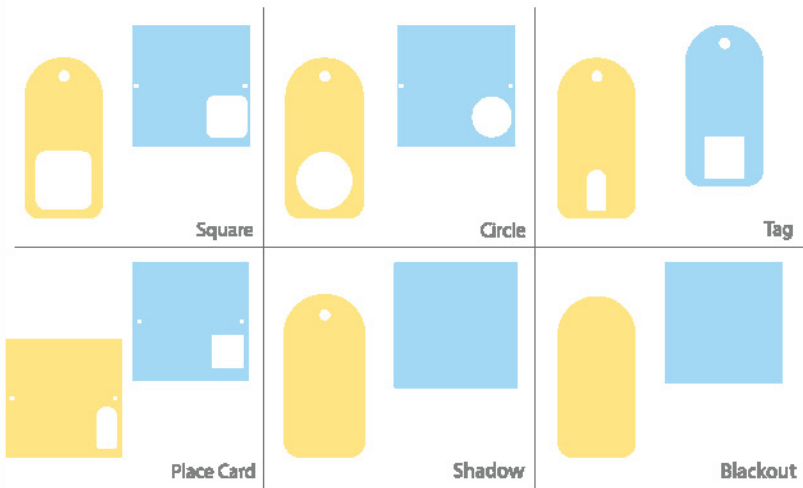



For in-depth information about using your Cricut™ Personal Electronic Cutter™ refer to the User Manual included with your Cricut™ machine. If you don't find the answers you need, support is available in the following two ways:

You will find the most current help and documentation on the Web site. Find answers to FAQs and Troubleshooting problems any time of the day.

**INTERNET:** [www.cricut.com](http://www.cricut.com)

Refer to the Customer Support information that came with your Cricut™ Personal Electronic Cutter™ or call for Customer Support options at:

**PHONE:** 1-877-7CRICUT (727-4288) Monday–Friday 9:00 a.m.–5:00 p.m., mountain time

29-0063 Christmas Cheer Handbook



Spanish Fork, UT 84660



©&™ 2006 Provo Craft and Novelty, Inc.

All rights reserved

Made in China

[www.provocraft.com](http://www.provocraft.com) • 074305