

Use with CRICUT™
PERSONAL ELECTRONIC CUTTER™
and CRICUT EXPRESSION™



Heatherlandster.





Provo Craft

# Contents

Meet the Designer	
Advanced Features	
Icon Gallery	
Contact Us	



This handbook contains instructions specific to A Word Party™ cartridge.

For complete instructions refer to the Cricut™ user manual included with your machine or visit www.cricut.com



The characters on A Word Party cartridge were designed by:

featherlandster.

Growing up I somehow missed out on going to kindergarten and I have been doing my best to make up for it ever since! I have a passion for the basic kindergarten curriculum, including cutting, glueing, drawing, and collecting paper of any kind! I have done my best to advance at least some of my artwork from off of my mother's fridge and into my countless family scrapbooks, and an assortment of Sizzix\*, paper and sticker products produced by Provo Craft. I hope that some of my ideas can inspire you on your own personal journey of creativity!

Heather lives in Calgary, Alberta, Canada, with her husband and their six children, who have all attended kindergarten and who all happily support Heather's creative efforts!

#### ABOUT THIS CARTRIDGE

(This handbook contains instructions specific to A Word Party" cartridge. For complete instructions refer to the Cricut" user manual included with your machine or visit www.cricut.com)

# Selecting Characters

How to use the Shift and Shift Lock keys








Shift

To select a character from the upper right corner of a key, use the Shift key on the keypad. You don't need to hold it down. Just press Shift once and make your selection.

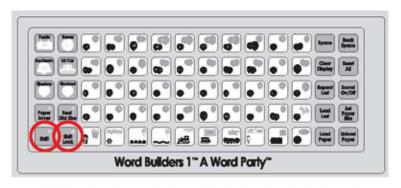


Use the Shift Lock key to select more than one character at a time from the upper right corners of keys. Press the Shift Lock key again to deselect it.

### What Is Real Dial Size?

All characters are measured from the lowest possible point to the highest. In A Word Party", all Base characters are created at the same height. The layers and shadows are sized proportionately to fit the base characters. If Real Dial Size is selected, all characters will be cut according to the selected dial size.



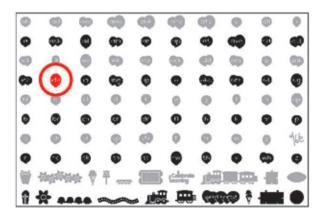


# What Are Creative Feature Keys?

The top three pairs of keys on the left panel are reserved for the Creative Feature effects of each set. These Features vary with each specific cartridge, providing greater versatility and thousands of options!

The Creative Feature keys included on A Word Party cartridge are Puzzle, Flower, Ice Cream, RR Car, Shadow, and Blackout.

To use a Creative Feature key, just select it prior to pressing the CUT button. The characters displayed on the screen will then be cut in the style of the selected Creative Feature. Due to their sizes and shapes, a Feature may not work with all shapes. Please refer to the Icon Gallery for Creative Feature details.

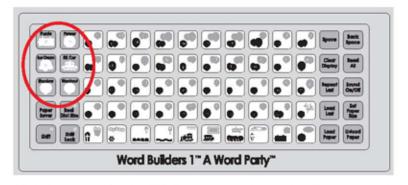


TIP: A Feature can be selected before or after a character has been selected, but before the CUT button is pressed. Once pressed, a Feature key will remain lit until it is turned off in one of the following ways: the Feature key is pressed a second time or the Reset All key is pressed.

### What Is a Foundation Key?


A Word Party™ cartridge contains two Foundation keys with two characters on each key.

Foundation shapes are the solid version of images that were used as Creative Features. These can be used alone or with layers created using the Creative Feature keys.

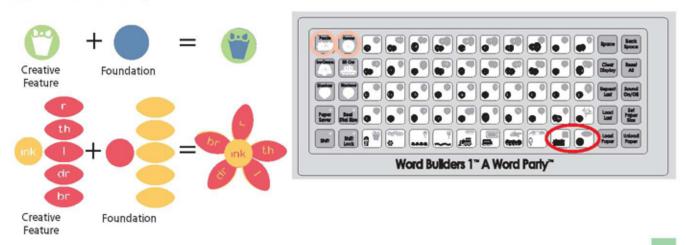


In the Icon Gallery, you will find a diagram for every character on your cartridge. The color change indicates that the image on the upper right is created using the Shift key and the image on the lower left is created without Shift. Using the Icon Gallery, you can see at a glance which Creative Features are available to use with the character that you have selected. You will find that some characters are very detailed and cut better at a larger dial size.

A Word Party Creative Features: Puzzle Flower Ice Cream RR Car Shadow Blackout

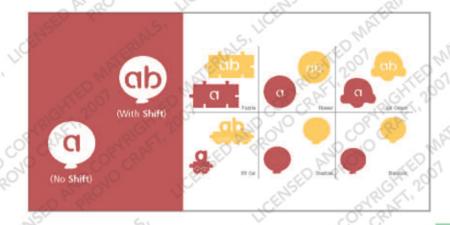





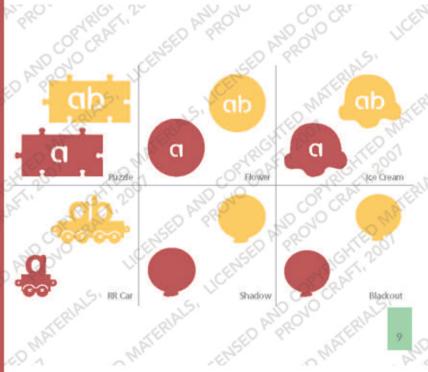





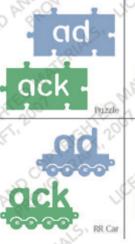

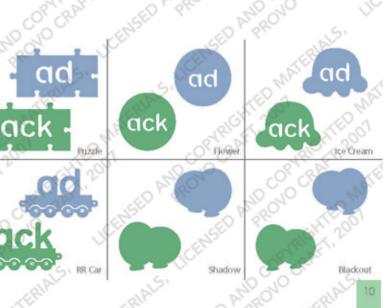













-aiii-

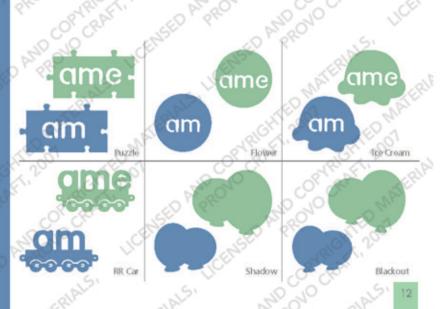






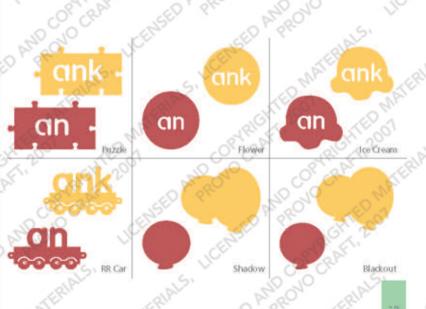









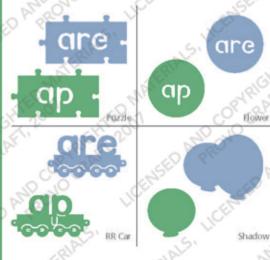



are

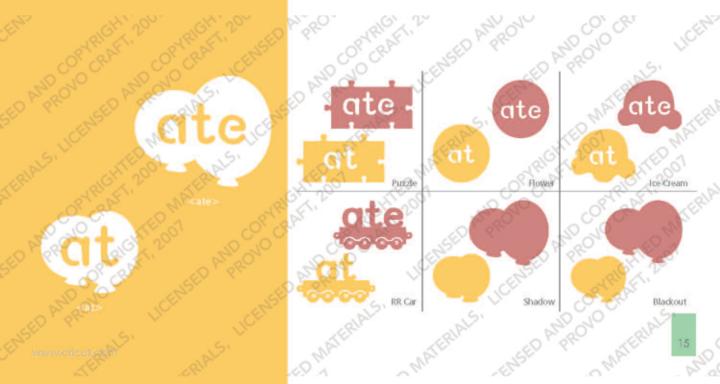


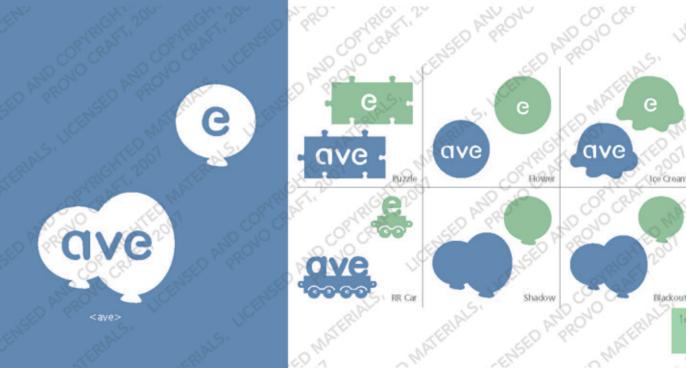








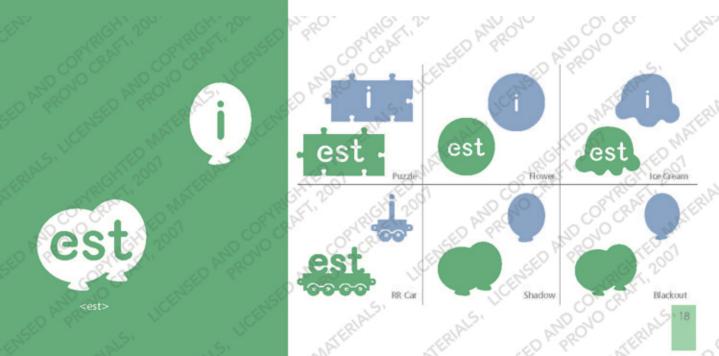








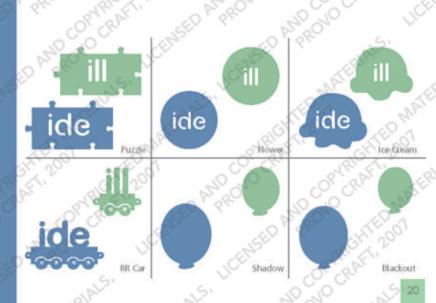



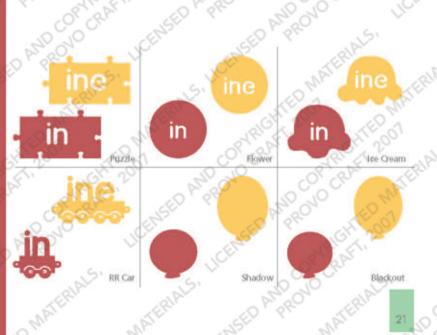


















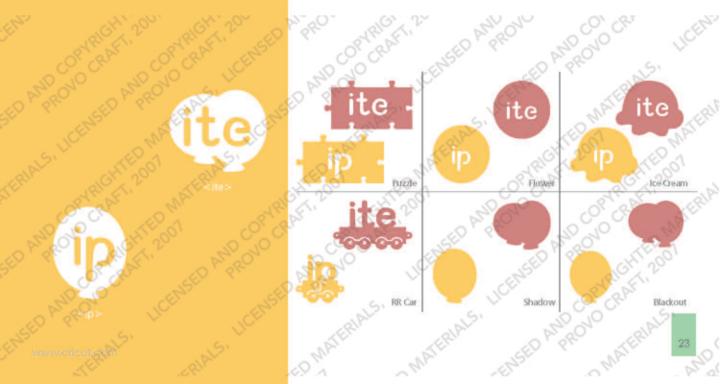

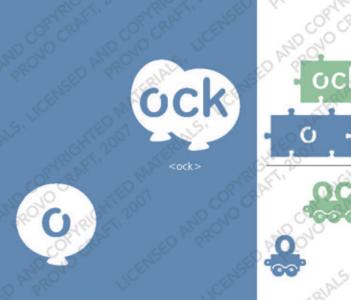

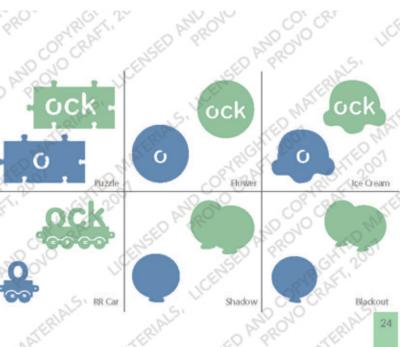





<oke>







<ore>



<oli>one>




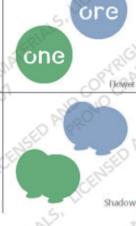

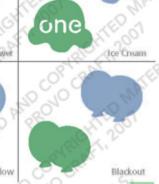

ore

26

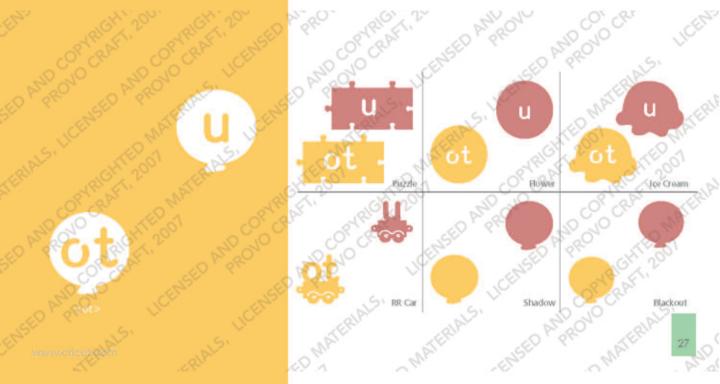






<onk>





<ug>

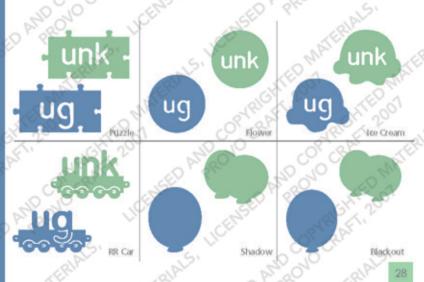

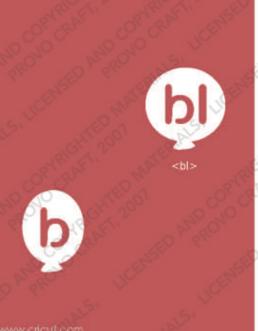


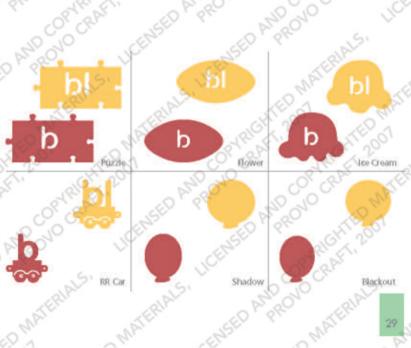

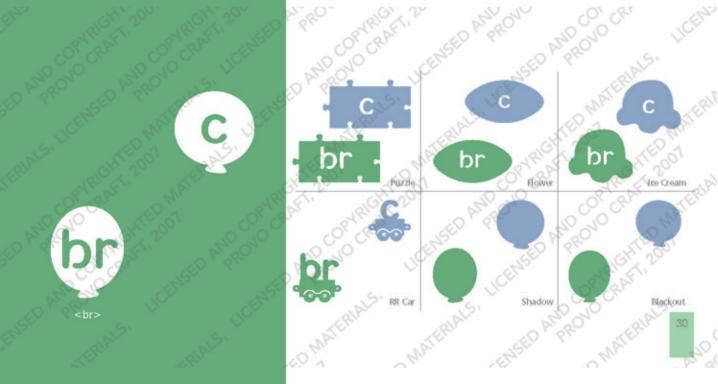

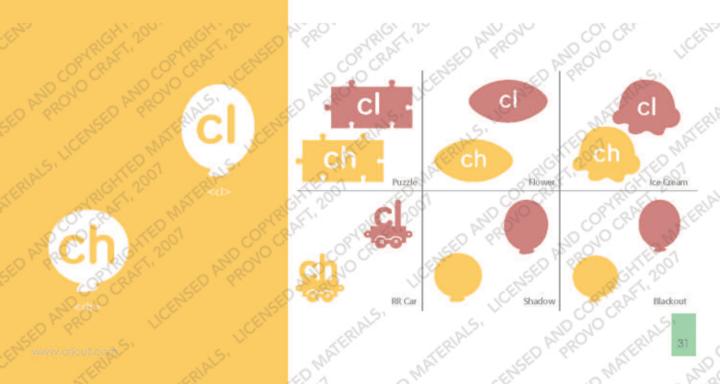





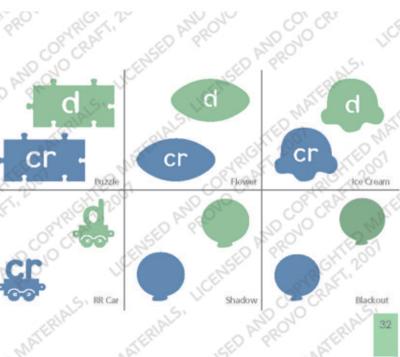








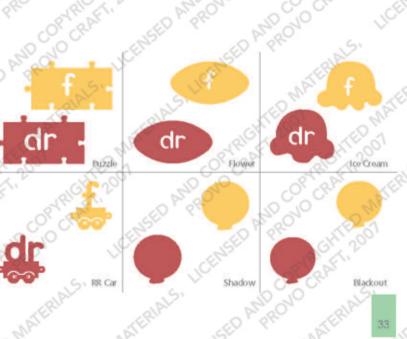


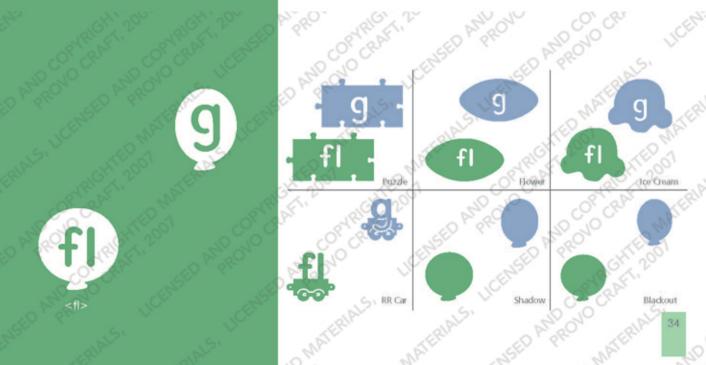


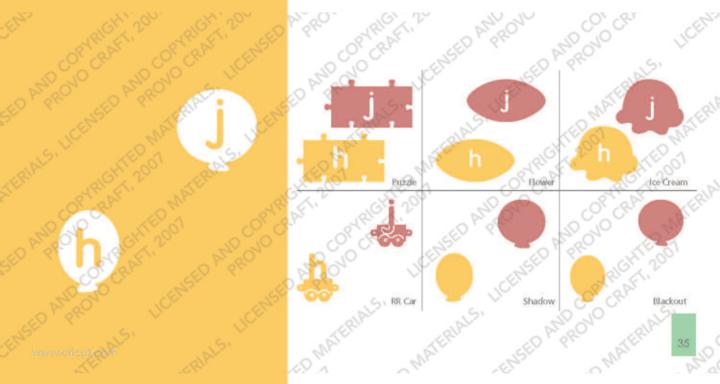

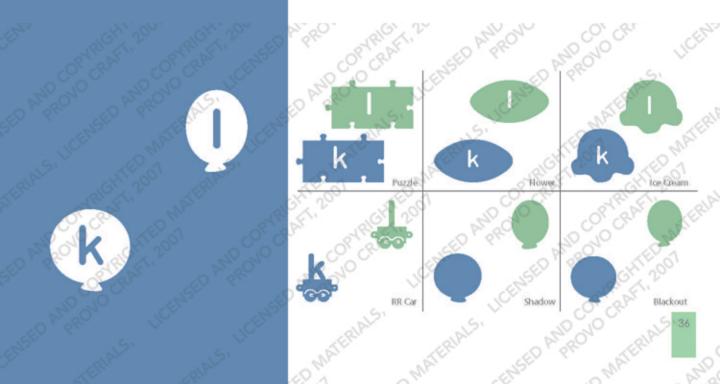


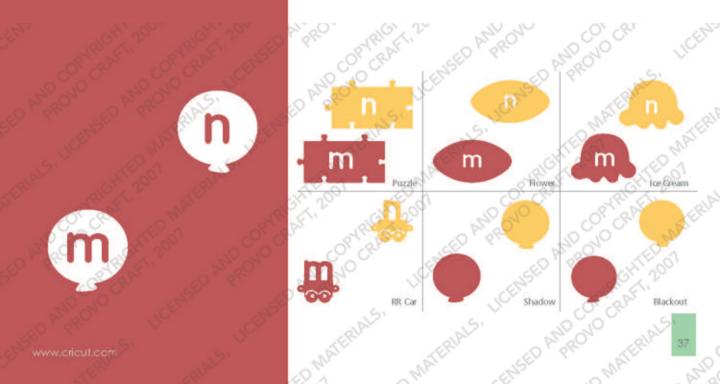

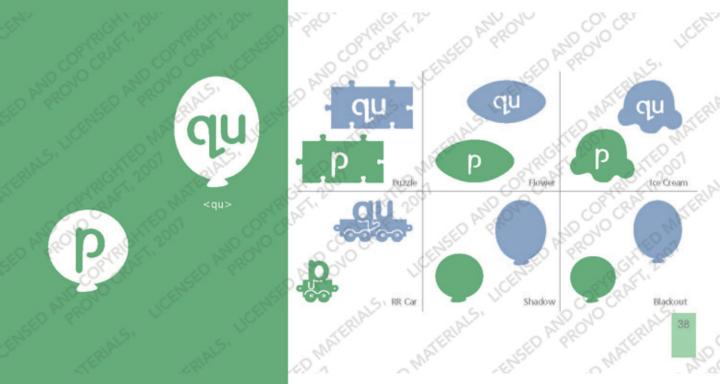


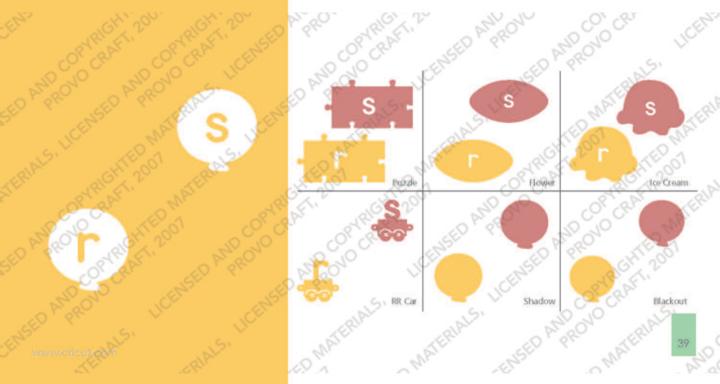



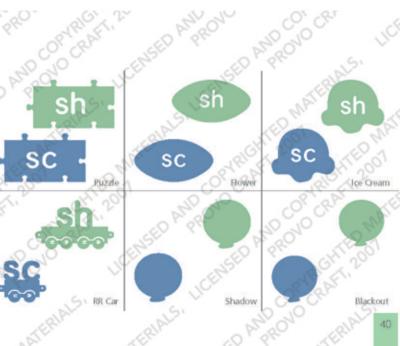




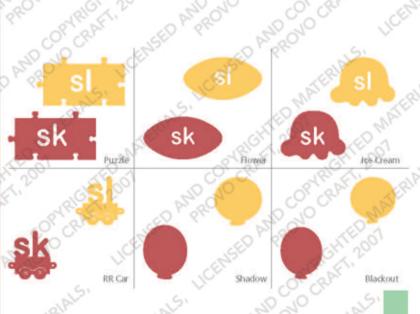



www.cricut.com







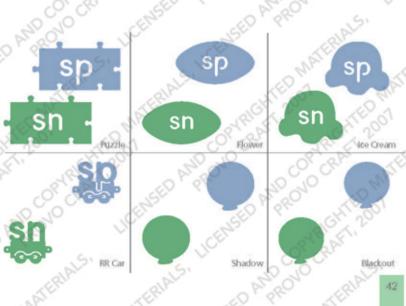


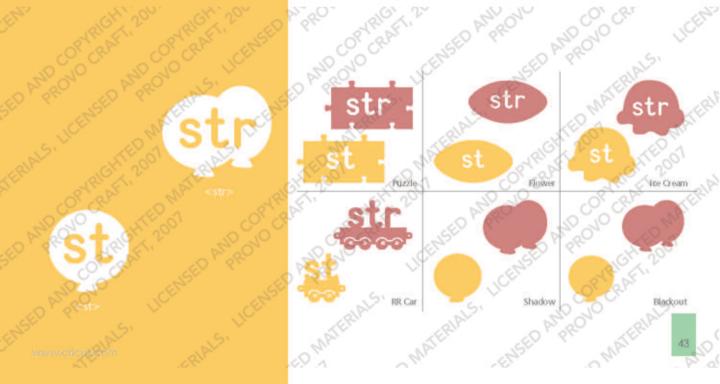


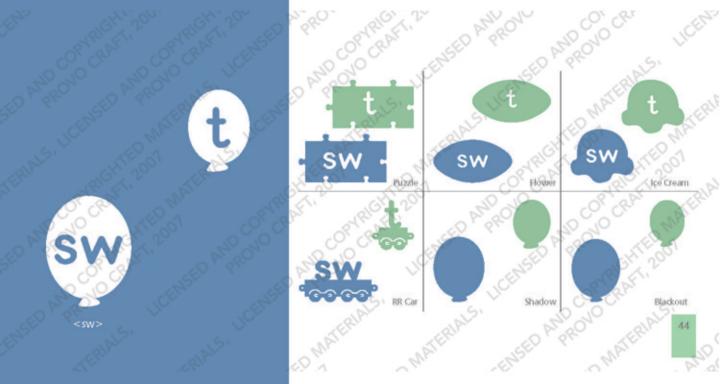

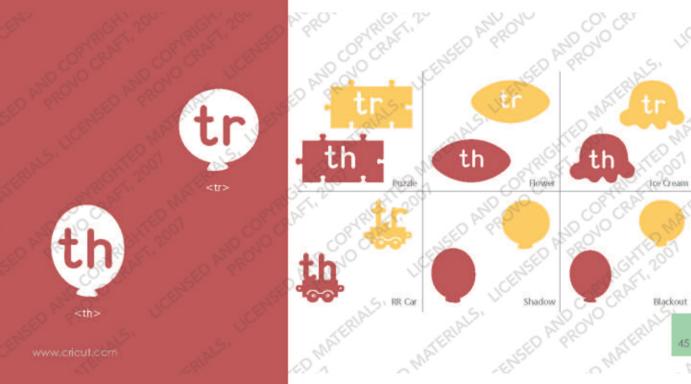

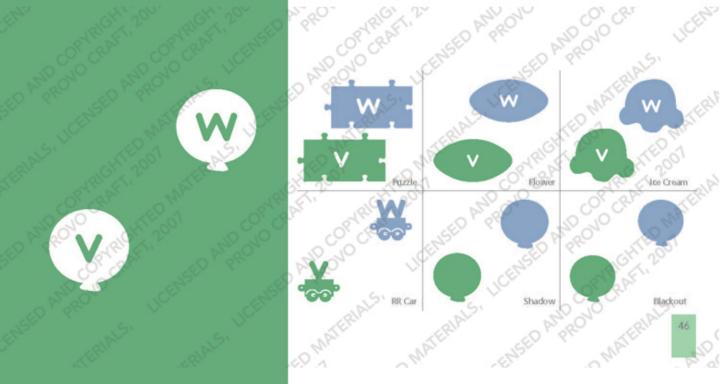

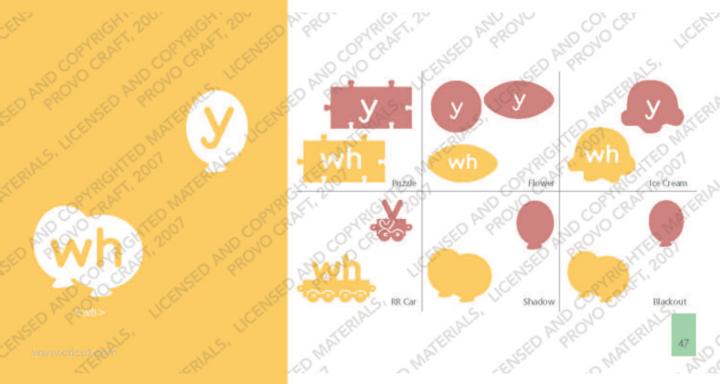

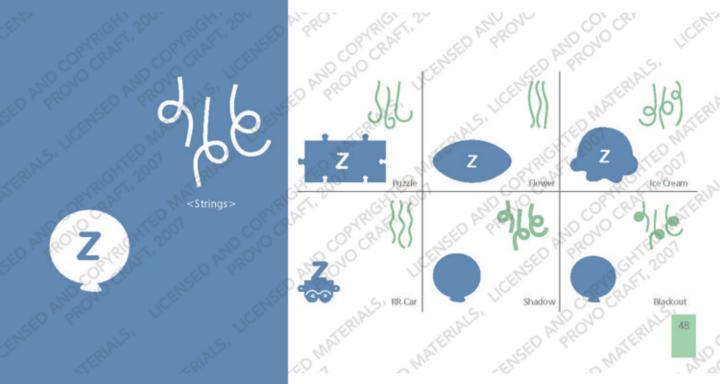





















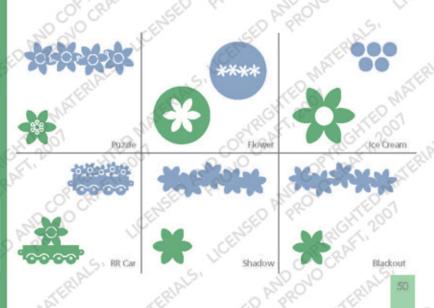





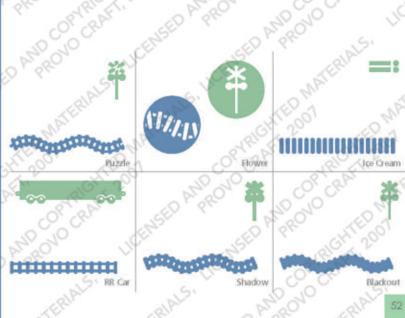










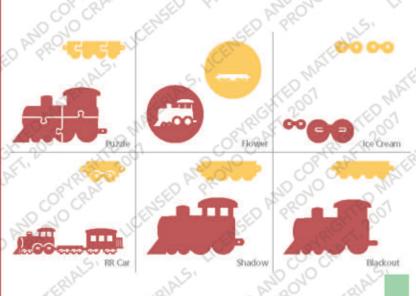










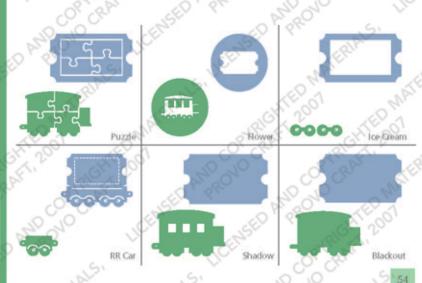



## Celebrate Learning























Ice Cream



Flower

Shadow




RR: Car






Blackou



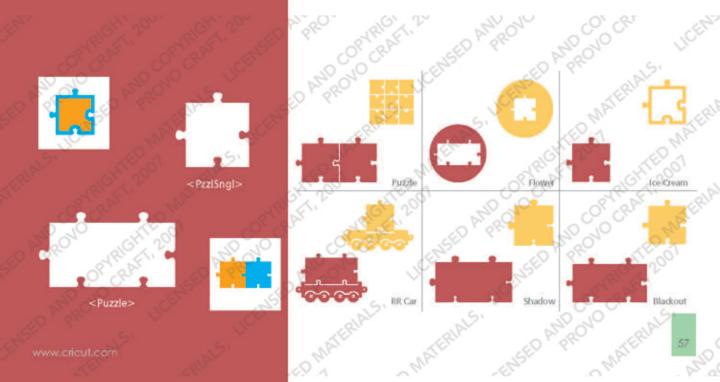

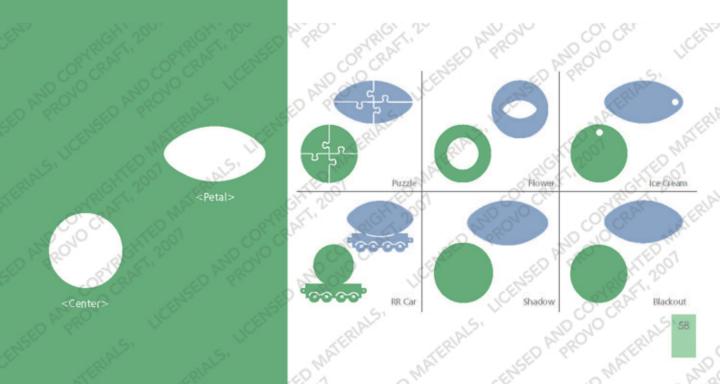



For in-depth information about using your Cricut™ cutting system refer to the User Manual included with your Cricut™ machine. If you don't find the answers you need, support is available in the following two ways:

You will find the most current help and documentation on the web site. Find answers to FAQs and Troubleshooting problems any time of the day.

INTERNET: www.cricut.com

Refer to the Customer Support information that came with your Cricut" machine or call for Customer Support options at:

PHONE: 1-877-7CRICUT (727-4288) Monday-Friday 9:00 a.m.-5:00 p.m., mountain time





© 2007 Provo Craft and Novelty, Inc. South Jordan, UT 84095 All rights reserved / Tous droits réservés Made in China / Fabriqué en Chine www.provocraft.com • 036007