

Cricut[®] Wireless Adapter Quick Start Guide

Step-by-step instructions for using the
Cricut[®] Wireless Adapter



©2012 Provo Craft and Novelty, Inc.
All rights reserved
South Jordan, UT 84095
Made in China
www.provocraft.com • 10227

Connecting to your wireless network

- Step 1:** Turn off the Cricut Expression® 2 machine and insert the wireless adapter. Make sure the adapter is placed logo side up into the slot.



- Step 2:** Turn on the Cricut Expression® 2 machine.



- Step 3:** On the Cricut Expression® 2 LCD screen, click to view the settings menu.



- Step 4:** Scroll until you find the **Wireless** button. Click on the button.



- Step 5:** Highlight the network you wish to connect to and click **Connect**.



If the network you wish to connect to does not automatically appear in the list, click the **Add Network** button to manually input the information.



To remove a network from the list, highlight the network name and click the **Remove** button.



To edit an existing network, highlight the network name and click the **Edit Network** button.



To refresh the network list, click the **Refresh** button.



Updating your Cricut Expression® 2 machine wirelessly

Step 1: Turn on the Cricut Expression® 2 machine. Ensure that the machine is connected to a wireless network.



Step 2: On the Cricut Expression® 2 LCD screen, click to view the settings menu.



Step 3: Scroll until you find the **Update Machine** button. Click the button.

Step 4: Follow the onscreen instructions to download and install any available updates for the Cricut Expression® 2 machine.

Wirelessly cutting with the Cricut Craft Room™ design tool

Step 1: Turn on the Cricut Expression® 2 machine. Ensure that the machine is connected to a wireless network.



Step 2: On the Cricut Expression® 2 LCD screen, click to view the setting menu.



Step 3: Scroll until you find the **CCR Login** button. Click the button.

Step 4: Input your Cricut® username in the field. Click **Save**.

Note: If you do not already have a Cricut® account, please go to www.cricut.com and create a **free account**.



Step 5: Log in to the Cricut Craft Room™ design tool on your computer. Your computer must be connected to the same wireless network as your Cricut Expression® 2 machine.



Step 6: Design a project and click **CUT**.

Step 7: Select the Cricut Expression® 2 machine.

Note: Even after disconnecting your machine from your wireless network, your Cricut Expression® 2 machine will appear in the Select Device list for about a week.

Legend



Settings menu



Update Machine



Wireless indicator



Please check your wireless connection.



Connect



Wireless strength indicator



Add



No Cricut Craft Room™ login information saved on the machine.



Remove



Cannot connect to the Cricut Craft Room™ server. Please check the login saved on your machine or try again later.



Edit



Refresh



Successfully connected to the Cricut Craft Room™ design tool.