

cricut joy xtra™

 


User Guide


 





JCTR201C

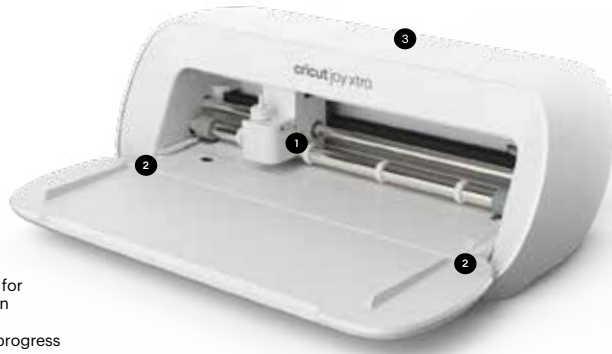Get to know your Cricut Joy Xtra™

- 1 Tool Clamp
- 2 Material Guides
- 3 Indicator Light



Indicator Lights

-  **Solid** Ready to use
-  **50% Brightness** Idle
-  **Slow Pulse** Searching for Bluetooth® connection
-  **Fast Pulse** Update in progress
-  **Flash** See Cricut app for directions
-  **Red** Error
-  **Off** No power source

Included

- Cricut Joy Xtra Smart Cutting Machine
- Blade + Housing
- Cricut Joy Fine Point Pen (0,4 mm)
- Welcome Card
- Power Adapter & Cord
- Free Trial Membership to Cricut Access™ (New Subscribers Only)
- 50 Ready-To-Make Projects Online
- Materials For Practice Cut
- Bonus Materials

How to power on



 
Before operating machine, read enclosed Important Safety Instructions.

- Connect included power adapter to machine
- Plug other end only into a compatible wall outlet
- Connect machine to compatible device via Bluetooth®
- Activate machine at cricut.com/setup




Use caution, and follow instructions when replacing blade. For instructions, see blade packaging or help.cricut.com/blades

Change tool

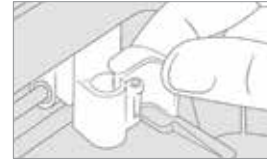

 1. Open **Tool Clamp (1)**, and remove tool.

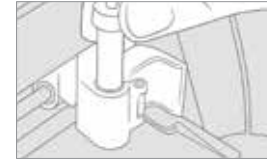

2. Firmly seat new tool.

 


3. Close clamp.


Load machine mat with material



1. Remove protective clear cover.

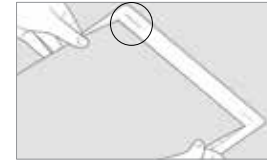


 2. From top left corner, align material onto mat.

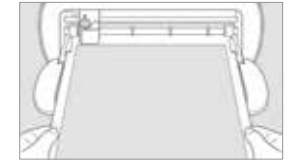

3. When prompted, insert mat between **Material Guides (2)**.

 Load Smart Materials™

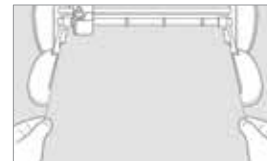

When prompted, position Smart Material between **Material Guides (2)**.

Every project is unique.

For more help resources, see help.cricut.com

- Get free expert-led Cricut courses & workshops on demand at learn.cricut.com
- Join other Cricut Community members in our Official Cricut Facebook group.

Important safety instructions

PLEASE READ THIS ENTIRE DOCUMENT PRIOR TO SETTING UP, OPERATING, AND SERVICING YOUR CRICUT® SMART CUTTING MACHINE. PLEASE FOLLOW THE ENCLOSED INSTRUCTIONS, ONLINE INSTRUCTIONS, AND OTHER OFFICIAL CRICUT INSTRUCTIONAL MATERIALS.

In these instructions the term “Machine” means Cricut Joy Xtra™.



WARNING: Risk of Injury, Fire, and Electric Shock.



Operating Machine in a manner not prescribed in the enclosed instructions, online instructions, and other official Cricut materials may result in damage to the Machine, property damage, injury, or even death.



Machine is intended to be operated by an adult only. Not intended for use by children 12 years or under. Always supervise children around Machine.

Use Machine only for its intended crafting purpose.



INDOOR USE ONLY. MACHINE IS INTENDED FOR INDOOR USE IN DRY LOCATIONS ONLY. DO NOT USE IN OR NEAR WATER. DO NOT IMMERSIVE IN WATER OR ANY OTHER LIQUID.

Machine is not intended for use by persons with reduced physical, sensory or cognitive capabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety and familiar with the safe operation of Machine.

Disconnect the electrical power by unplugging Machine before servicing or cleaning.

Only clean Machine with a soft cloth dampened with glass cleaner or water. Never use any kind of flammable liquid to clean Machine. Do not use solvents such as acetone or nail polish remover to

clean Machine as these will permanently damage Machine’s surfaces.

Always unplug Machine before replacing the blade. Blades are extremely sharp and should be handled with caution and extreme care. Prevent blade contact with hands and body to avoid injury. Do not allow children to handle blades. Blades and other small parts are choking hazards and should be kept and stored away from children.

Do not open, modify, or otherwise tamper with Machine.

Do not operate if Machine or cord is damaged. Contact Cricut Member Care for service: cricut.com/contact or 1-877-727-4288.

Use only Cricut approved power adapters. Never pull on the cord to disconnect Machine from the electrical outlet; instead, grasp the plug and pull to disconnect Machine.

The power cord should be positioned so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

Place Machine on a strong, flat, level, and stable surface. Make sure your work space has enough space in the front and back of Machine to allow the machine mat to move through Machine freely.

Do not place your fingers or other objects in Machine while connected to electrical power, or while Machine is powered on, or during operations.

Keep hair, jewelry, loose clothing, fingers, other body parts, and any other items that could get caught in the moving parts away from Machine while it is operating as the rapid movements of the carriage, mat, and material during operation may cause injury.

Do not touch the mat or material during machine

operation even if the mat or material stops moving. Do not touch the mat or material until Machine ejects the mat or material from Machine.

Machine should never be left or stored outside, in unheated or unairconditioned spaces, or in environments where Machine can come in contact with water.

Caution: Moving the star wheels while the machine is in material loading mode can result in pinched fingers. To avoid pinching, move star wheels all the way to the right prior to choosing material type for projects that use Foil Transfer Tool and/or Card Mat.

Technical specifications

Cricut Joy Xtra™ Models: JCTR201C

Description: The Cricut Joy Xtra is a desktop cutting and writing device for helping Do It Yourself (DIY) crafters make crafting projects. It takes images created in a software design environment (Cricut Design Space) and recreates the images in paper, vinyl, etc. using tools to cut and write on these materials.

The mechanical design is like that of a small desktop printer or plotter with an electrically driven head that moves the cutting/drawing tools laterally, and feed rollers that move the crafting materials longitudinally. The combination of these movements gives 2 axis motion to perform the desired actions (cutting, drawing, etc.) on the crafting materials in a 2-dimensional plane.

Product specifications	
Size (Width x Length x Height)	12.48 in x 4.46 in x 5.87 in (31.71 cm x 11.32 cm x 14.91 cm)
Weight	6.03 lbs (2.74 kg)
Power input (appliance inlet)	18 Vdc, 2.5 A
External power supply	Input: 100-240 Vac, 50/60 Hz, 1.5 A; Output: 18 Vdc, 2.5 A. Model: TS-A045-1800251
Operating mode	Continuous
Electrical classification	Class III (Supplied by SELV)
Pollution degree	PD 2
Ingress protection	IPX0 (ordinary)
Wireless specifications	
Transmission type	Bluetooth
Frequency Band	2.4000 -2.4835 GHz
Maximum Radiated Power	<= 100 mW (e.i.r.p.)

cricut[™]