

failures due to misuse, accidental damage, or tampering. Cricut may, in its discretion, replace Machine. For warranty service, you may contact Cricut Member Care at +1 (877) 727-4288 or visit help.cricut.com. This warranty provides you with certain legal rights. You may have other legal rights which vary depending on your national, state, or provincial location.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CRICUT IS NOT LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF CRICUT EASYPRESS MINI. THE WARRANTY AND REMEDIES DESCRIBED ABOVE ARE EXCLUSIVE OF ANY OTHER WARRANTIES AND REMEDIES, WHETHER ORAL, WRITTEN, EXPRESS, STATUTORY, OR IMPLIED. TO THE EXTENT PERMITTED BY APPLICABLE LAW, CRICUT DISCLAIMS ALL IMPLIED AND STATUTORY WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ALLOWED AND DISCLAIMED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country, where some limitations or exclusions are not allowed under local laws. This may include the length of the warranty. This Machine is intended for sale in the United States and Canada. Country-specific warranty information can be found at cricut.com/warranty. THIS WARRANTY DOES NOT MODIFY OR AMEND YOUR STATUTORY RIGHTS.

In order to obtain warranty service, contact Cricut Member Care at +1 (877) 727-4288. Proof of purchase may be required to verify warranty eligibility. You can learn more about how your Warranty will be serviced by visiting cricut.com/warranty.

This warranty is issued by Cricut, Inc.

Cricut, Inc.
10855 South River Front Parkway
South Jordan, UT 84095 USA

MODEL: CHP050A1
RATING: AC120V 60Hz 150W

EPMWYXX01-02

Safety Instructions, FCC Statement & Warranty

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS.

READ THIS ENTIRE DOCUMENT PRIOR TO SETTING UP, OPERATING, AND SERVICING YOUR CRICUT EASYPRESS MINI™.

Please follow the enclosed instructions, online instructions and other Cricut instructional materials. For more safety and compliance information go to cricut.com/safety.

In these Safety Instructions the term **“Machine”** means Cricut EasyPress Mini™.



WARNING: Risk of Injury, Fire, and Electric Shock.

Operating Machine in a manner not prescribed in the enclosed instructions, online instructions, and other official Cricut materials may result in damage to Machine, property damage, injury, or even death.



Please note the following safety-related symbols that appear on Machine and Safety Base:



Attention. Alerts you to potential hazards. Please read and follow all instructions, warnings, and cautions.



Caution, Hot Surface. Machine operates at high temperatures. Machine heat plate and Safety Base are hot during use. DO NOT TOUCH.



Return Machine to Safety Base. Machine's high operating temperatures can cause burns, damage surfaces, and start fires. Always place Machine in Safety Base when not holding or using.



For Indoor Use Only. Machine is to be used in dry indoor locations only.

WARNING: Machine operates at high temperatures that can cause burns or other injury. Machine heat plate and Safety Base are hot during use. Always return Machine to Safety Base when not actively using. **USE WITH EXTREME CAUTION.**

CAUTION: Risk of electric shock. Do not open, modify, or otherwise tamper with Machine.

As a safety feature, Machine has a polarized plug (one blade is wider than the other), which will only fit into your outlet one way. If it doesn't seem to fit either way, do not force it and contact a qualified electrician.

Always turn Machine OFF before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect Machine from the electrical outlet; instead, grasp the plug and pull to disconnect Machine.

Before cleaning Machine, unplug and cool completely. Only clean with a soft cloth dampened with glass cleaner or water. Never use flammable liquid or solvents like acetone or nail polish remover.

Do not immerse in water or use in wet conditions.

Machine is intended for household and indoor use only:

- Be careful when using Machine in places where there are combustible or heat reactive materials;
- Be aware that heat may be conducted to combustible materials that are out of sight;
- Do not apply to the same place longer than recommended;
- Always place Machine on its Safety Base after use and allow it to cool down before storage;
- Ensure Machine and Safety Base are situated on a flat, stable surface;
- Do not leave Machine unattended when it is switched on; and
- Unplug Machine when not in use and before servicing or cleaning.

Machine is not intended for use by persons (including children) with reduced physical, sensory or cognitive capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of Machine by a person responsible for their safety. Children should be supervised to ensure that they do not play with Machine. If the power cord is damaged, do not operate Machine. The power cord should be positioned so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children). Use care not to allow the cord to touch the heated surface. Coil the cord loosely in the handle area when storing.

Do not operate if Machine is damaged and contact Cricut Member Care for resolution.

CAUTION: To provide continued protection against risk of electric shock, connect to properly grounded outlets only. Extension cords used with Machine

should be properly configured and capable of carrying the electrical load. Auto shutoff occurs after 13 minutes of inactivity, after pushing any button, or after the timer beeps. If Machine has to cool to reach a lower temperature, the auto shutoff 13-minute countdown starts after Machine has reached the set temperature. This may take additional time.

WARNING: Machine must be placed on its Safety Base when not in use.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

FCC Statement

The U.S. Federal Communications Commission (in 47 CFR 15.105) has specified that the following notices be brought to the attention of users of this product.

Pursuant to Part 15.21 of the FCC Rules, any changes or modifications to this equipment not expressly approved by Cricut, Inc. may cause harmful interference and void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

CRICUT EASYPRESS MINI™ LIMITED WARRANTY:

Cricut, Inc. ("Cricut") warrants this Machine as free from defects in material or workmanship for a period of one (1) year (unless otherwise required by law) from the date of purchase, provided that Machine is used for its intended purpose and consistent with the instructions provided by Cricut. Machine is intended for consumer home use. This limited warranty does not cover