


7. Inserting images from the Cricut® Image Library


H. Inserting basic shapes

Insert Shapes allows you to quickly and easily add a variety of basic shapes to your project.

Step 1 Click the Shapes Tab in the Design Panel on left of the Canvas. This will open a menu with the basic shapes you can choose from.

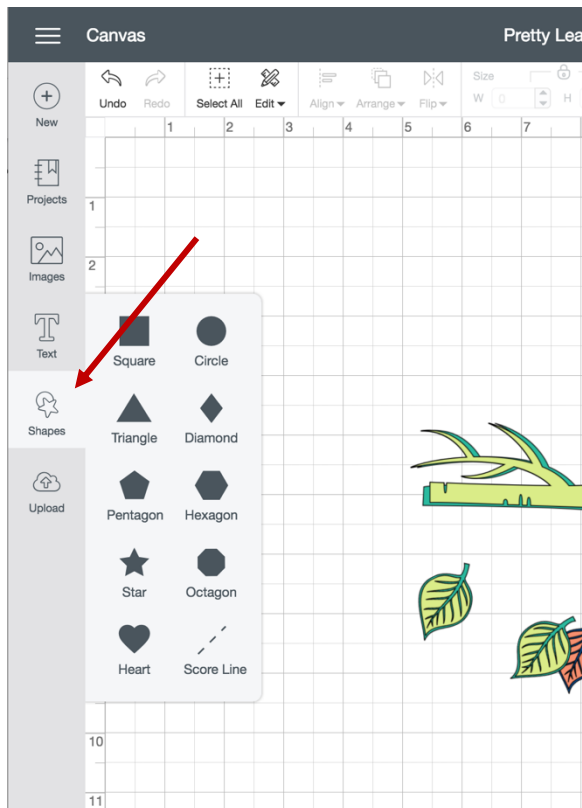

Step 2 Click on a shape from the menu to instantly add it to the Canvas. The shape will now appear in the Layers Panel as a single layer image. The Insert Shapes menu will automatically close when a shape is inserted on the Canvas.

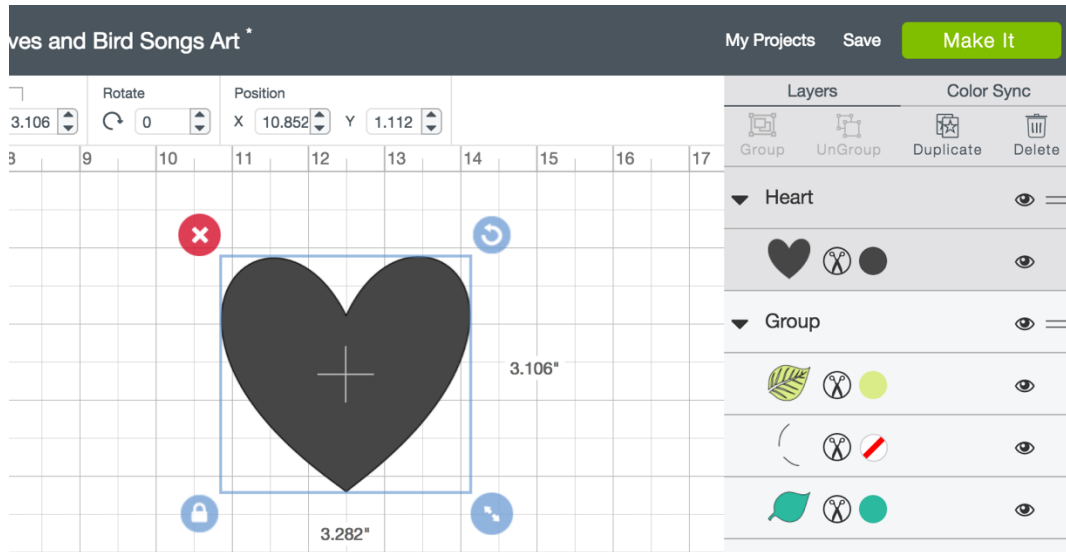

Tip: You can edit the shape just as you would any other image.