

12. Layers Panel

L. Selecting line type

The line type determines if the image layer or text will cut, score, write, or Print then Cut in your final project. It is represented by a symbol next to the layer thumbnail. Line type is identified in the Layers Panel with a line type icon. You can change line type from the Layers Panel by accessing the Layer Attributes Panel.



Cut

Cut The image will be cut from your material.



Write

Write The image will be drawn using a Cricut® Pen.



Score


Score The image will be scored using the Cricut® Scoring Stylus.



Print


Print then Cut The image will be printed using your home printer and then cut on your Cricut® machine.

Step 1 Click the Line Type Icon in the Layers Panel to open the Layer Attributes Panel. A black line under the selection will indicate the current line type.

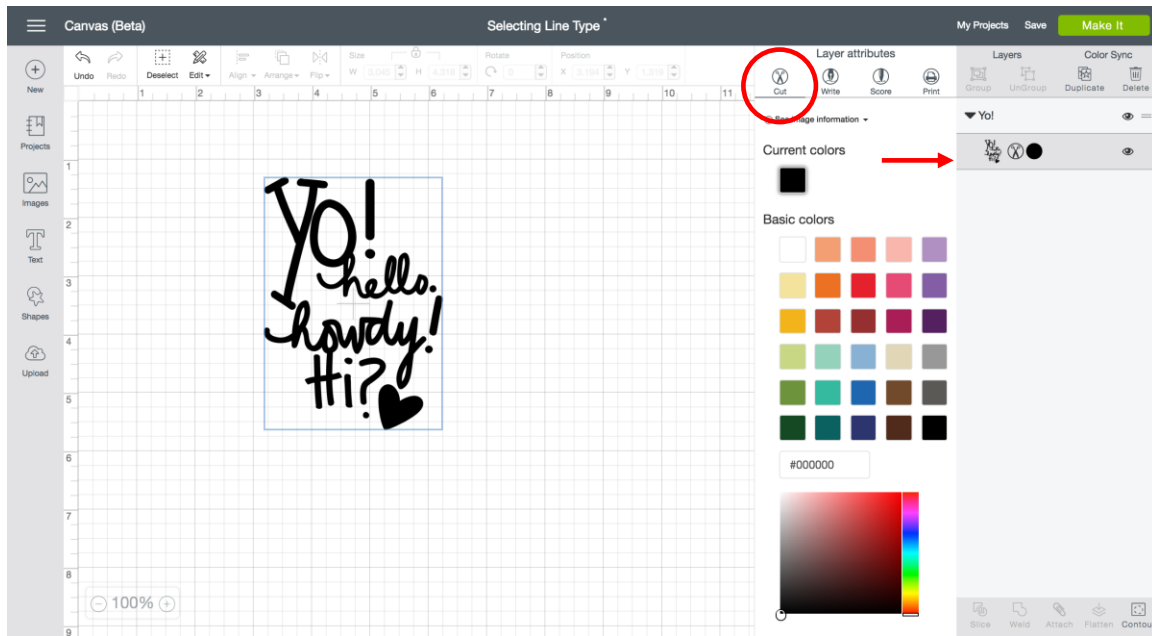

Tip The line type of each layer must be changed separately.

Step 2 Click the icon that represents the desired line type. The image line type on the Canvas will change to reflect changes in the Layers Panel. When you are done with your selections, click outside the Layer Attributes Panel to close it.

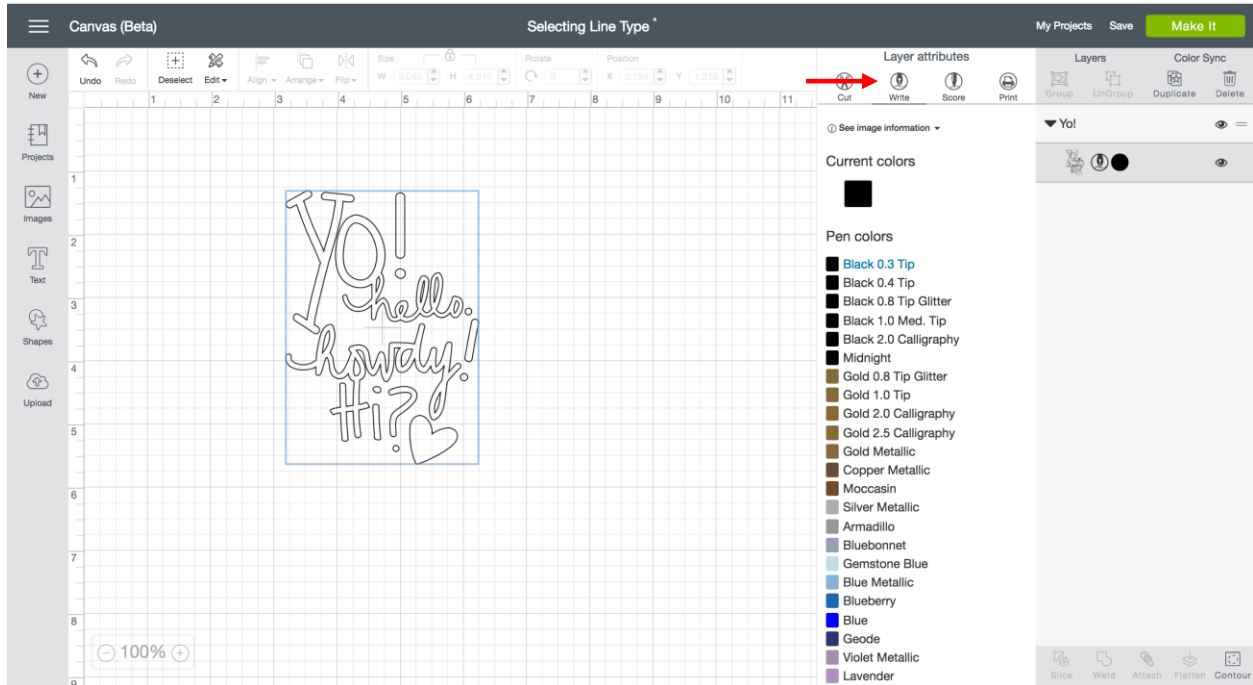

Tip If there are multiple layers to your project and the line type is set to write or score, you need to indicate which layer should be scored or written on. To do this, you need to select both layers and click Attach in the Layers Panel.