


# 14. Using your own images


## F. Uploading pattern fills

With Cricut Design Space™, you can upload most .jpg, .bmp, .png, and .gif files for free to use as pattern fills for your images.


**Step 1** To begin a pattern upload, click *Upload* from the design panel on the left side of the screen.

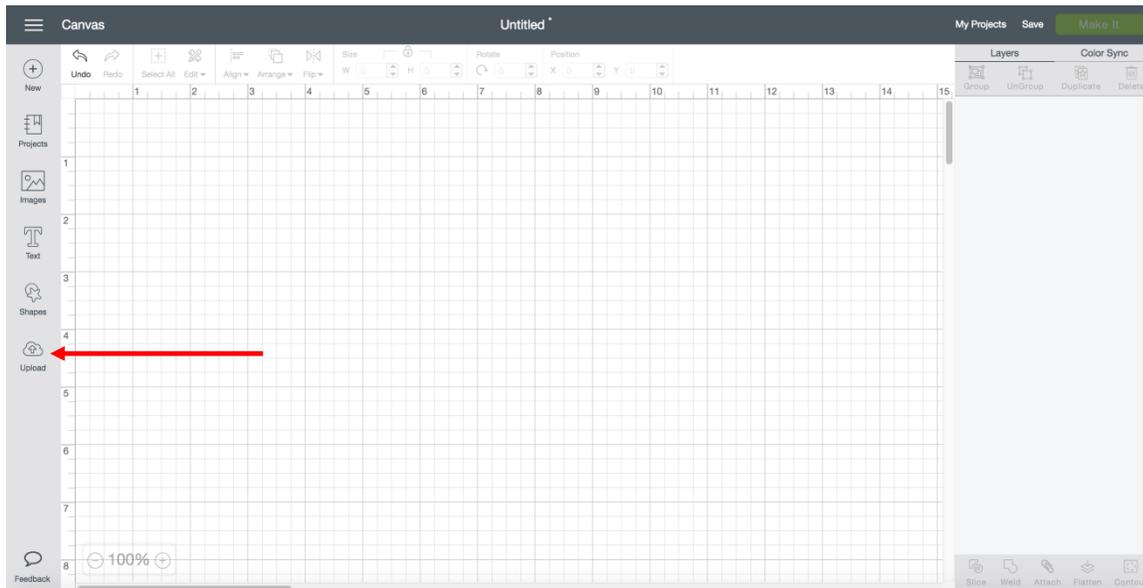


**Step 2** A window will open and prompt you to choose image or pattern upload. Pattern Fill upload allows you to work with file types including .jpg, .gif, .png, and .bmp. To begin, click *Upload Pattern*.

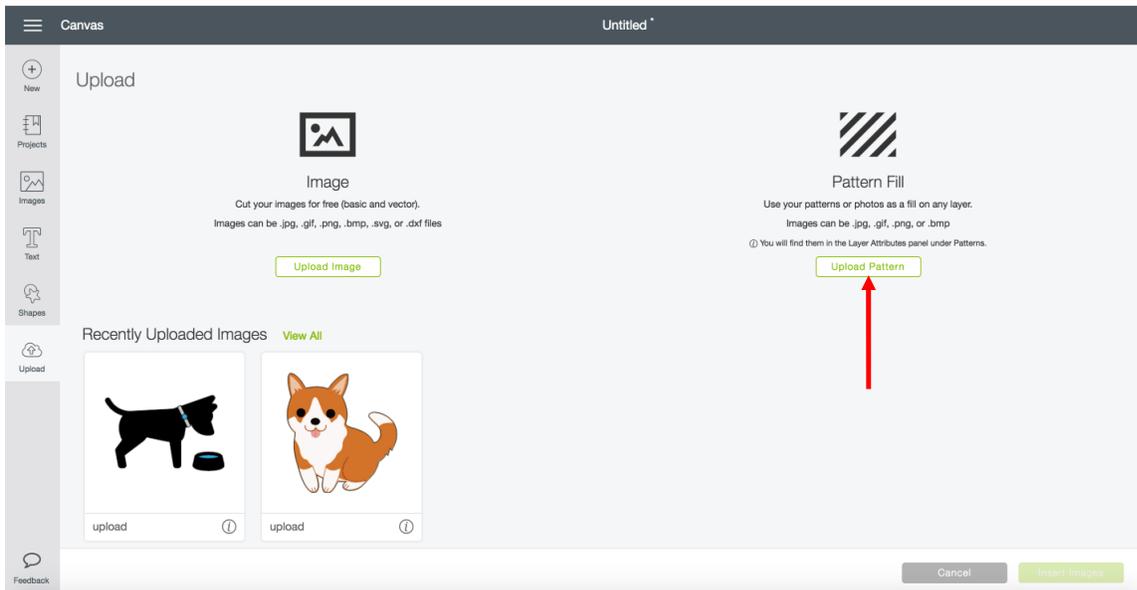


**Step 3** Click *Browse* to locate the image you want to use as a pattern, from your computer. The file selector will open. You can also drag and drop an image file from your computer directly onto this screen.

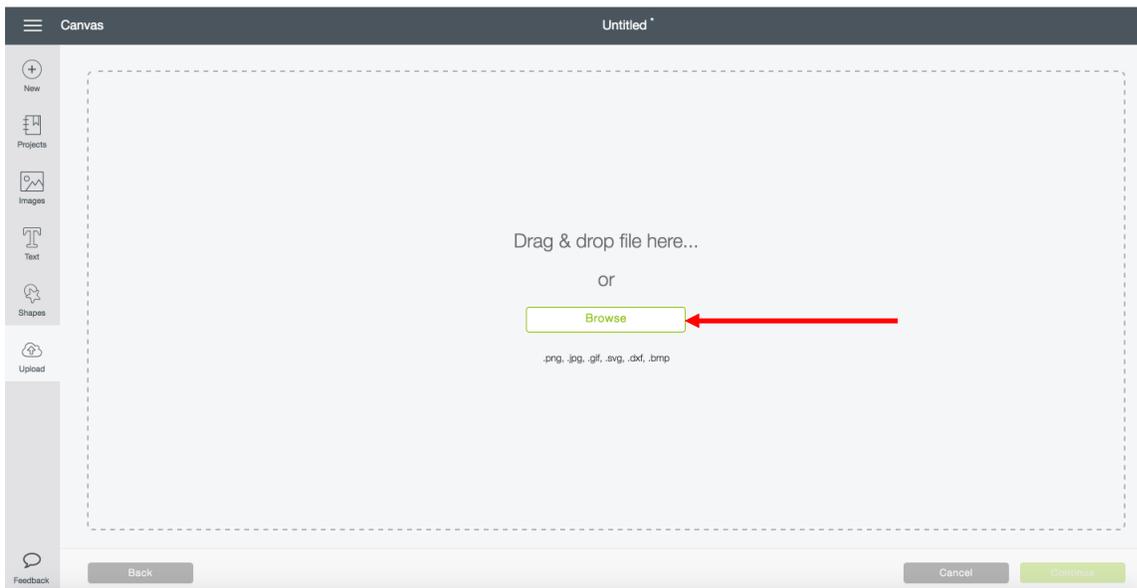


**Step 4** Select the .jpg, .gif, .png, or .bmp file you want to upload. Then click *Open*.

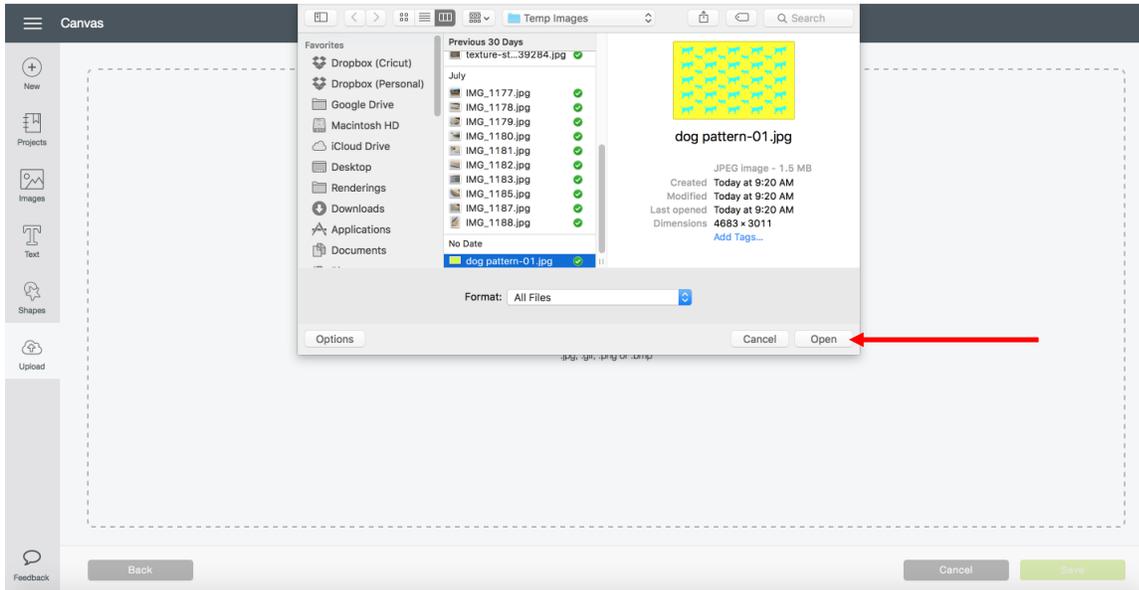


**Step 5** Name your pattern and tag it (if desired), using the provided options for easier browsing.

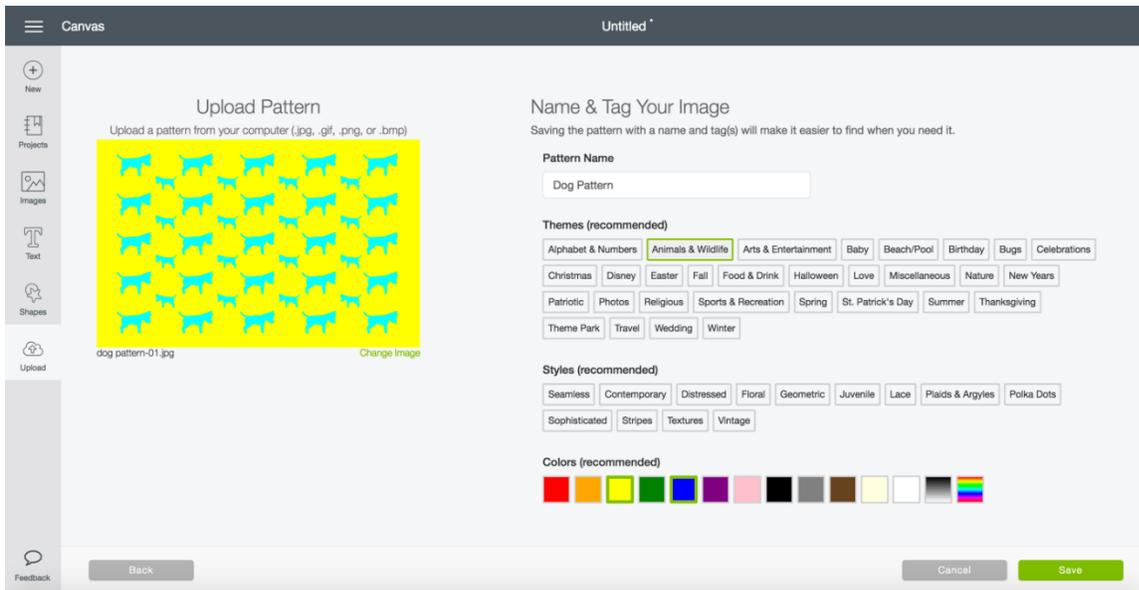

**Step 6** When you are done, click **Save**.

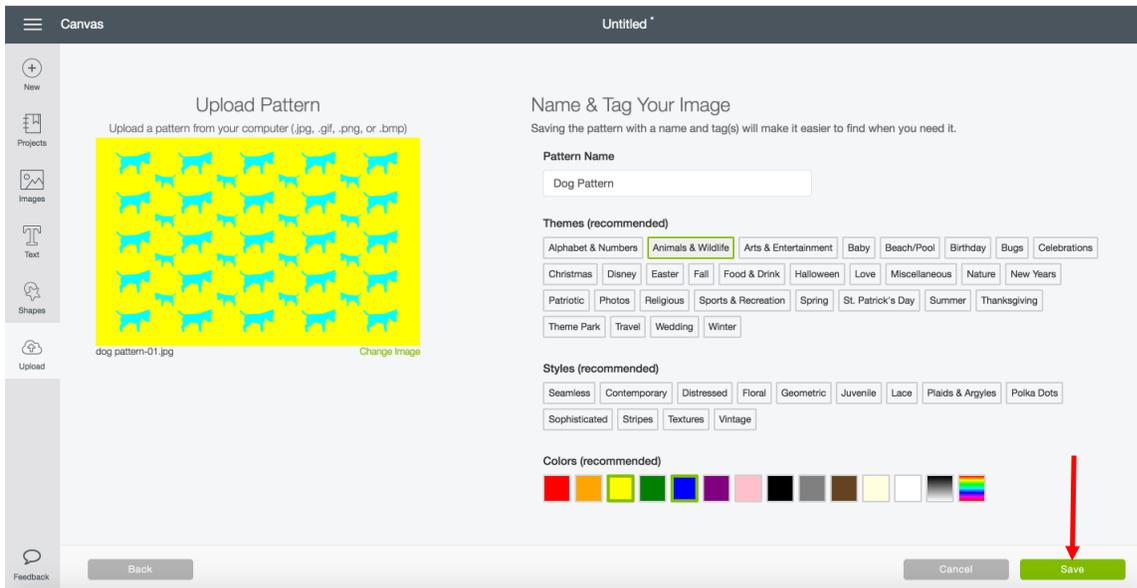

**Step 7** You will return to the Upload Images screen with a blue message indicating your pattern has uploaded successfully.

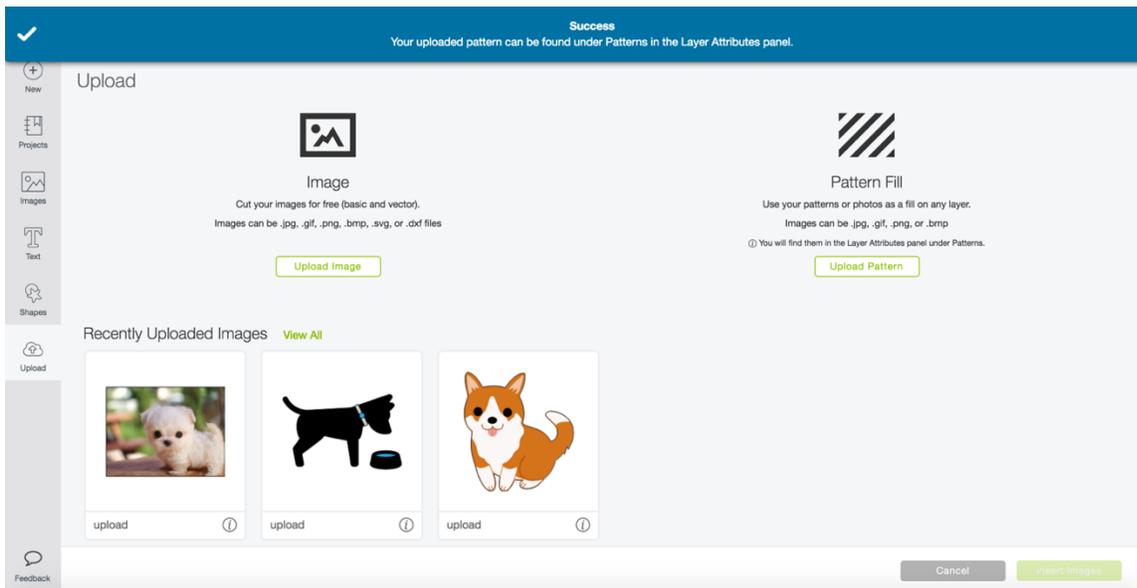

**Tip** Your uploaded patterns can be found in the Layer Attributes Panel under Patterns. You can browse by using the tags you saved to the pattern or by selecting Uploaded under the pattern filter.