 


14. Using your own images

 
G. Changing an uploaded image into a cut image

By default, basic uploaded images save as Print then Cut images unless the settings are adjusted during the upload process. However, on the Canvas you also have the option of changing the image Line Type to cut or write.


Step 1 Insert an uploaded Print then Cut image onto the Canvas and select it.

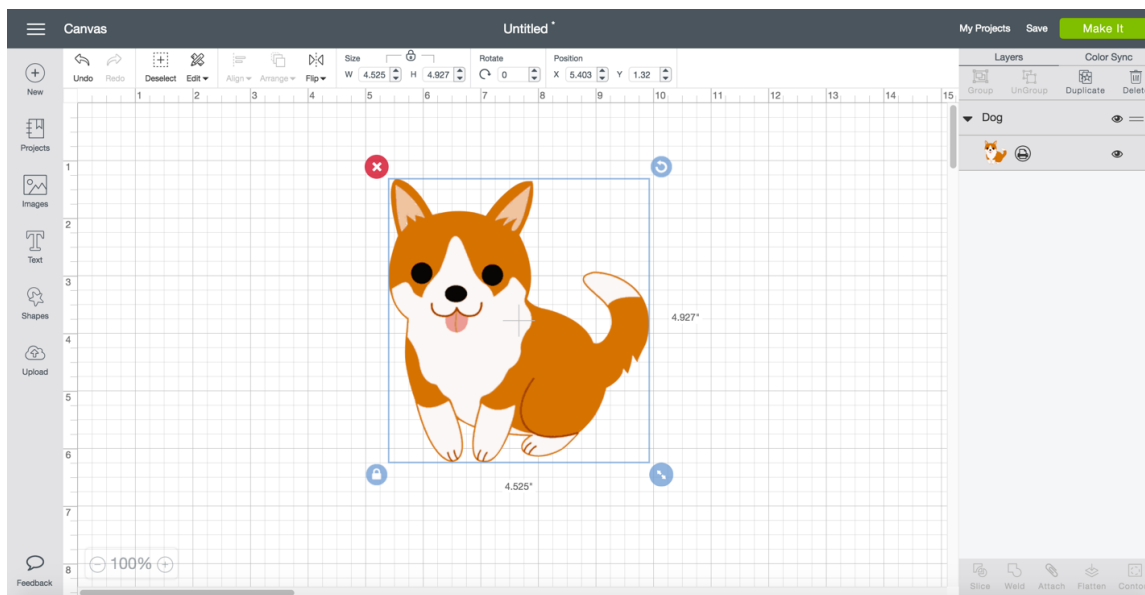

Step 2 Click on the Line Type Icon in the Layers Panel to view the Layer Attributes Panel.

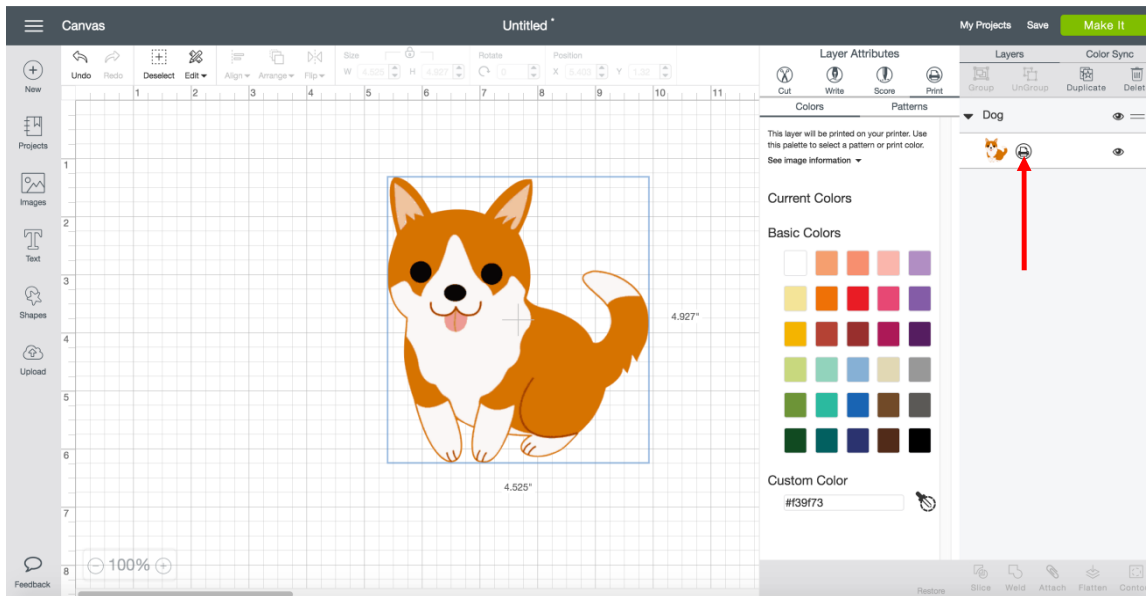

Step 3 Select the Cut Line Type to change your image to cut instead of print. The image now appears in the Layers Panel as a single solid image and has a scissor icon as the Line Type, indicating that it will cut.

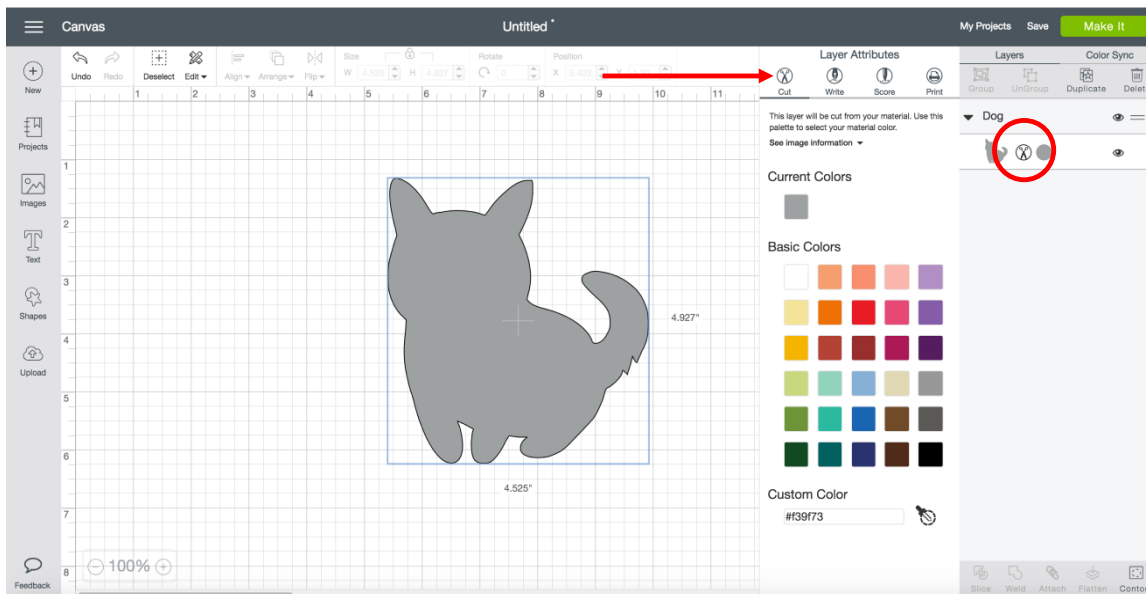

Tip Clicking on the Print Line Type will restore your image to a printable image, so you can print it on a printer and then cut it out with your Cricut Explore® machine.