


18. Purchasing images


C. Purchasing patterns from the Cricut Image Library

Design your project with ease using any pattern in the Cricut® pattern library. There is no need to purchase patterns until you are ready to start cutting. However, you are free to purchase patterns from the Cricut® pattern library at any time.


Step 1 To purchase an individual pattern, open the Layer Attributes panel and then select “Patterns” under the Print line type. This will open the Cricut® pattern library.

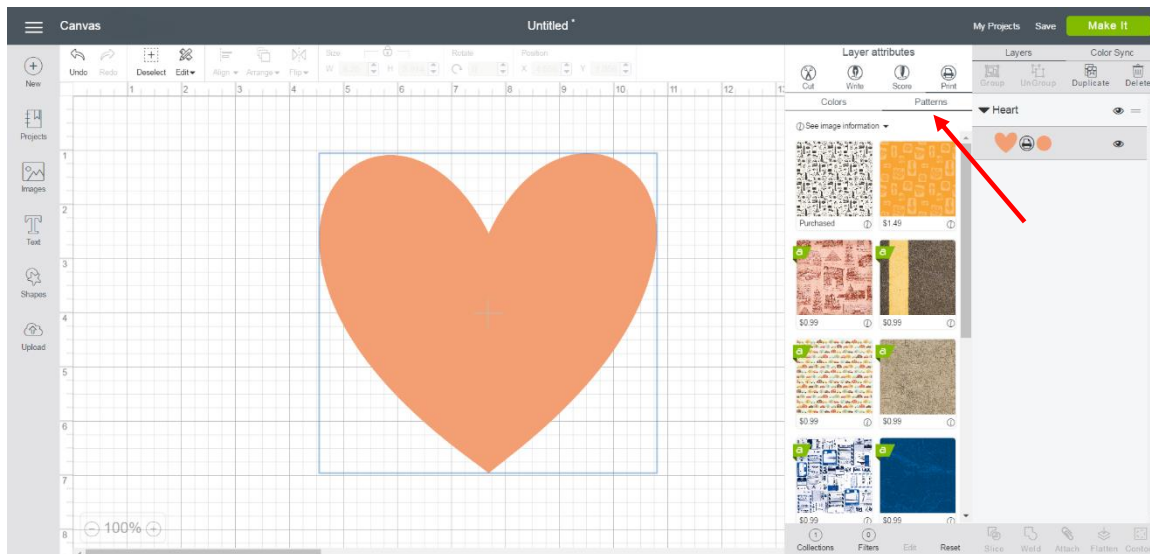


Step 2 Click on the information icon on any Cricut® pattern tile to display the pattern details.

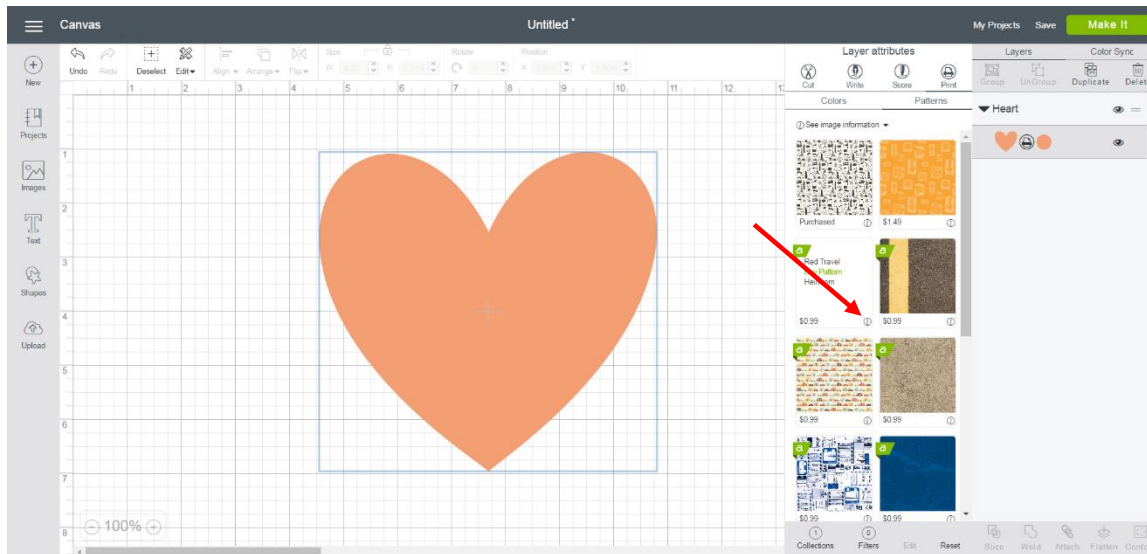

Step 3 Click "Buy Pattern."

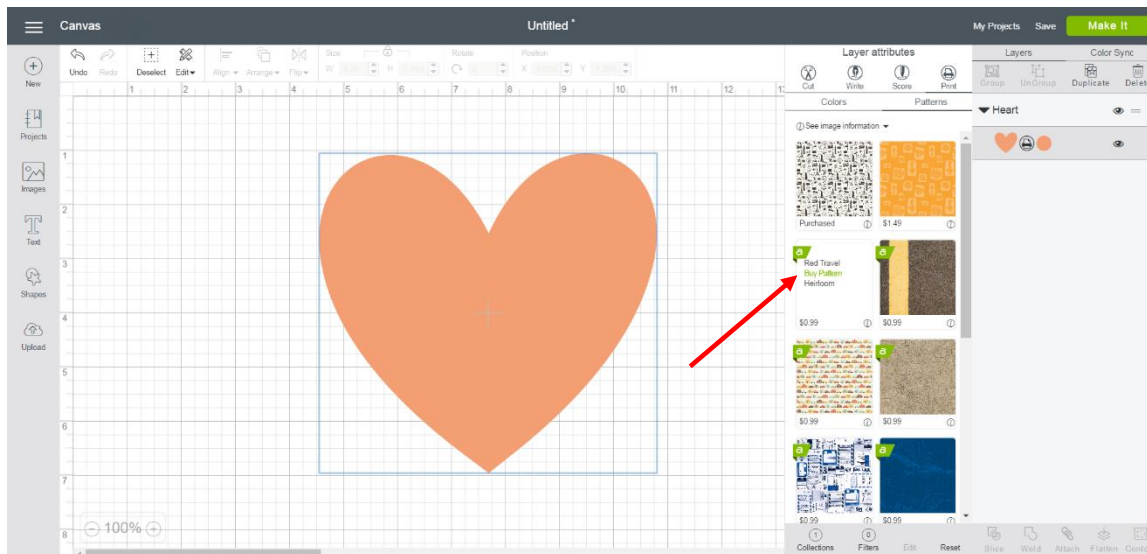


Step 4 You will be taken to the Purchase Summary screen. If you haven't already, enter your payment information. Once the information has been entered, the Save Profile button will become active. Click "Continue" to continue. (If your payment information has been recorded, you will skip this step.)

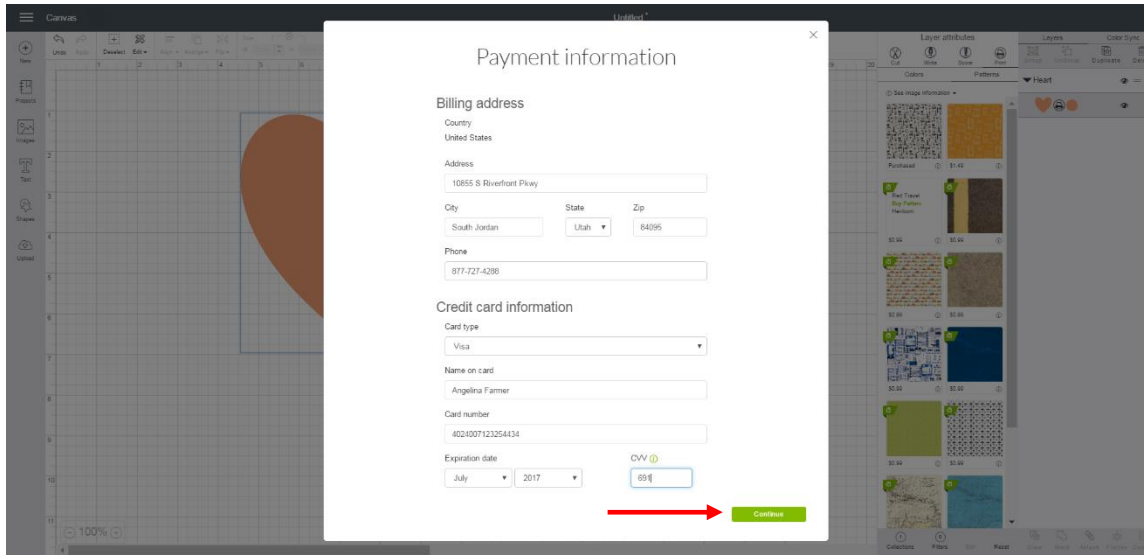


Tip Cricut Design Space™ will save your information for future purchases. You can change your information in the Account Details screen at any time.


Step 5 Review your purchase summary.

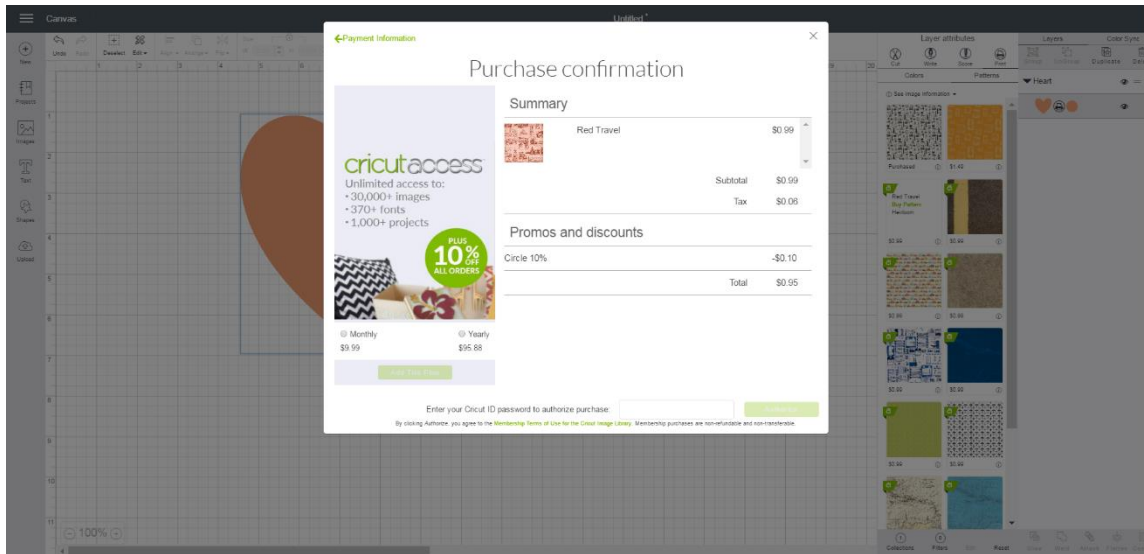


Step 6 Enter your password in the Authorize Purchase field, and then click "AUTHORIZE."

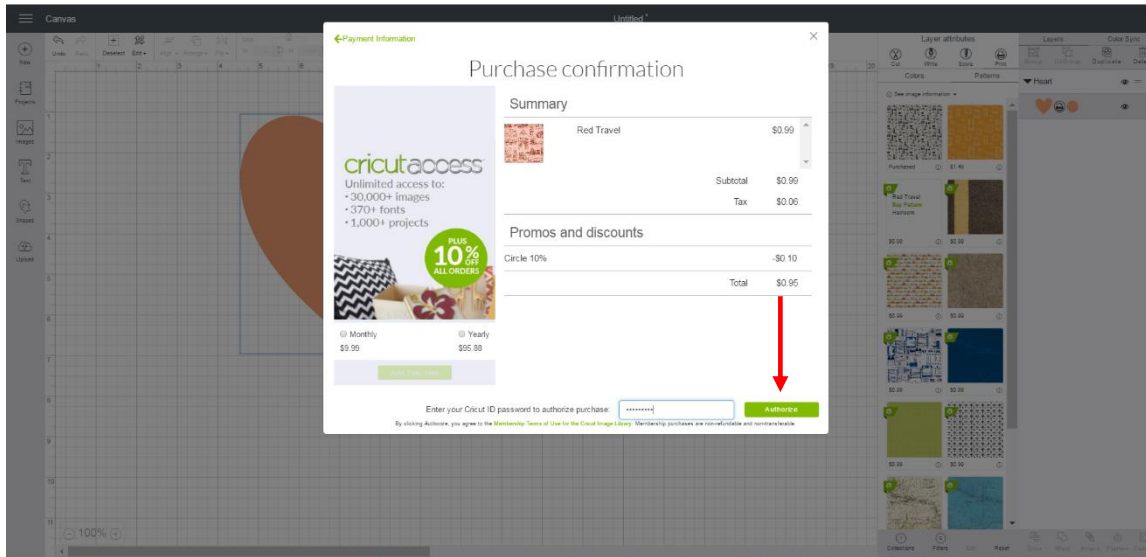

Step 7 Once your purchase is complete, you will receive a message which reads, "Order Successful," and you will be returned to the design screen.

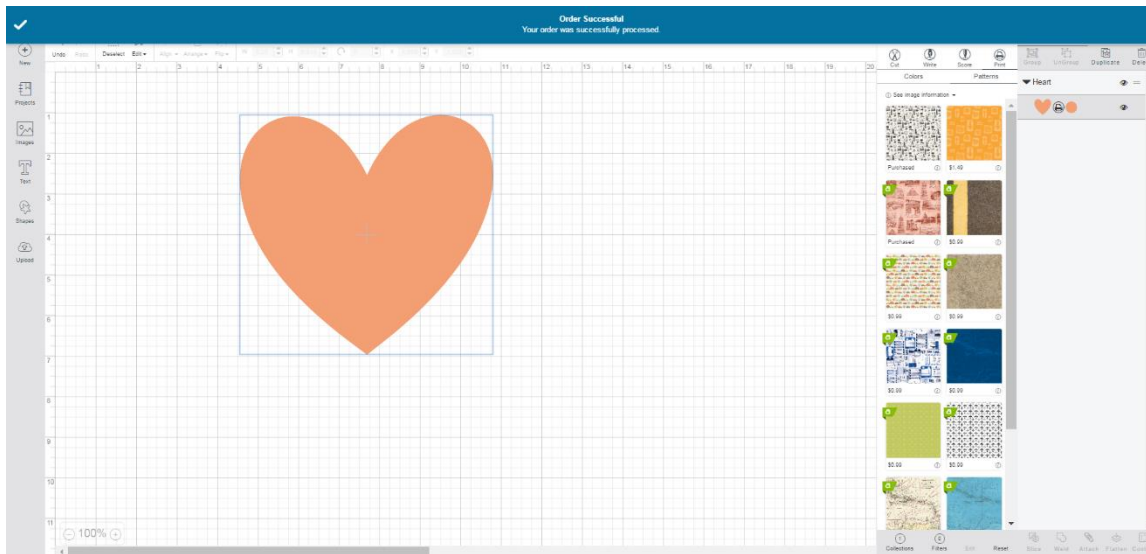

Step 8 Your pattern will now appear as Purchased in the pattern tile.

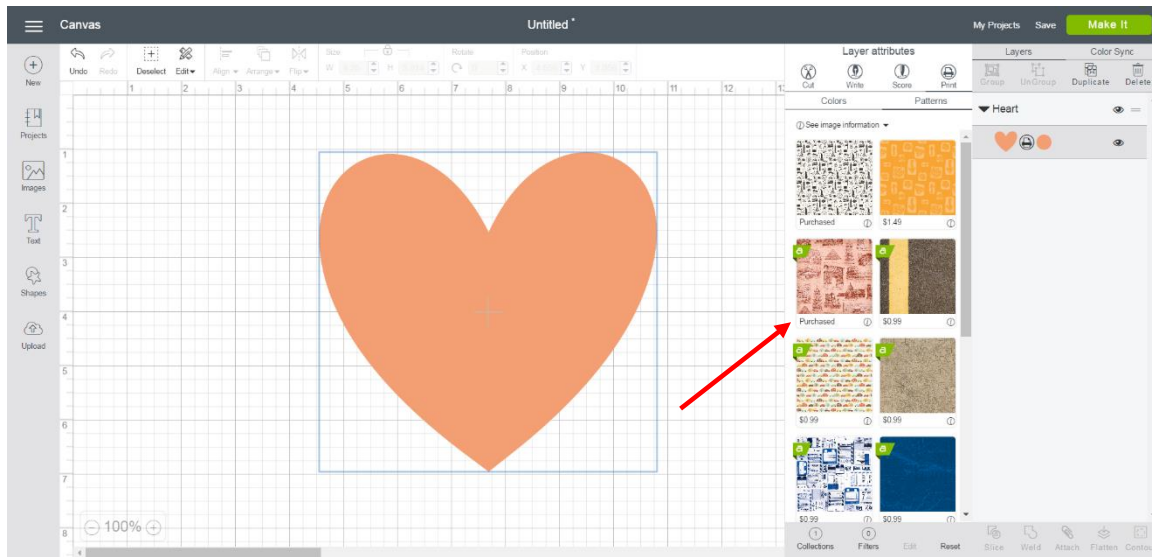

Tip If the purchased image doesn't appear as Purchased in the pattern tile, sign out of your account and then sign in again. The purchase will now appear correctly.