



How Do I

Apply Cricut Permanent Vinyl?

Cricut Premium Vinyl - Permanent Glossy is ideal for projects that need to weather the storm, from mailboxes to mugs, to outdoor signage and more. It's a water-resistant and UV-resistant film with an adhesive that can last for up to 3 years.



Let's Start

Cutting Premium Vinyl - Permanent Glossy with a Cricut Machine

1. Place vinyl (liner side down) onto Cricut StandardGrip cutting mat.
2. Select images and size and load mat into the machine.
3. Refer to Kiss Cut guide table below to adjust machine settings.
4. Press CUT.

Preparation with Cricut Transfer Tape



Note: Standard transfer tape is recommended.

1. Remove the negative pieces from each of the images using the Weeder found in the Cricut Tool Kit, leaving the liner intact. This process is known as weeding.
2. Remove the transfer tape liner.
3. Gently place the transfer tape (adhesive side down) over the images. To prevent bubbles, start in the center and move out toward the edges. Use a craft stick or Scraper found in the Cricut Tool Kit to burnish (rub or polish) the tape onto the vinyl.
4. Peel away the vinyl liner at a 45-degree angle. If the vinyl does not separate from the liner, simply burnish the transfer tape onto the vinyl and peel away again.

Application

1. Make sure your project surface is clean and dry. Carefully place the transfer tape with vinyl images onto your surface how you would like them to appear.
2. Now burnish transfer tape onto the surface, starting in the center and moving out

toward the edges. Use a craft stick or Cricut Scraper.

3. Peel the transfer tape away from the vinyl at a 45-degree angle. If the vinyl sticks to the transfer tape, simply burnish the vinyl onto the surface again. Then continue to peel the transfer tape away from the vinyl.



Tips

- Applying with the “wet method” is helpful for positioning layers
- Not easily repositioned due to the stronger adhesive
- Care instructions: Handwash only

Machine	Blade DepthP	ressure	Speed	Multi-cut	Blade Assembly
Cricut Personal Cricut Create Cricut Expression	3	Medium	Medium	1	Fine Point
Cricut Expression 2	43		Medium	1	Fine Point
Cricut Imagine	3	3	Medium	1	Fine Point
Cricut Explore	Turn the Smart Set Dial to “Custom” and select the “Premium Vinyl - Permanent Glossy” setting from the list of custom materials.				Premium Fine Point
Cricut Maker	Select the “Premium Vinyl - Permanent Glossy” setting.				Premium Fine Point



Note: Results may vary. Always do a test cut to verify settings.



Additional Resources

[Learn.cricut.com](https://learn.cricut.com)

[Help.cricut.com](https://help.cricut.com)

[Inspiration.cricut.com](https://inspiration.cricut.com)