



Why Does My

Cricut Maker Keep Turning Off in the Middle of the Cut?

If you are cutting foil or metal sheets with your Cricut Maker, and the machine is turning off unexpectedly, this may be due to a build-up of Static Electricity.

- Dry environments are particularly prone to the buildup of static electricity.
- Using a spray bottle filled with water, spray some mist into the air to help dissipate the buildup.
- You can also begin to use a small humidifier or vaporizer in the area; increased humidity will help prevent the build-up of static electricity.

If you have any questions or need further assistance, please contact Member Care.



Note: Do not spray water directly on to the Cricut Maker machine.



Additional Resources

[Learn.cricut.com](https://learn.cricut.com)

[Help.cricut.com](https://help.cricut.com)

[Inspiration.cricut.com](https://inspiration.cricut.com)

[Power button is Blinking Red](#)

[My Explore machine pauses or stops when cutting, writing, or scoring my project](#)

[My Cricut machine is freezing during cutting](#)

[My machine is tearing or dragging through my material](#)