



Where Is

The Mobile Device Charging Port on the Cricut Maker?

The Cricut Maker has a charging port on the right side of the machine near the bottom. You can use this port to charge your mobile device while cutting!

Note: If you are using Cricut Explore power cord, the charging may not work. We recommend using the power cord that came with your Cricut Maker machine.



Note: The sole purpose of this port is to charge mobile devices. It is not configured for data transfer.

