

Firmware update

Firmware is essential for your Cricut Explore® machine to operate properly and communicate with your computer. On occasion, firmware updates may be required to enable new functionality and improve performance.

If you receive a firmware update notification, you should go to Cricut Design Space™ on your PC or Mac and follow the instructions in the Cricut Explore® User Manual, under Machine Setup > Firmware Update. Follow this link:

http://content.provocraft.com/b/pdfs/explore_manual/firmwareupdate.pdf