

You only need one account with Cricut. Your Cricut ID is the email address you use to sign in to:

- design in Cricut Design Space[™] for PC, Mac[®], or iOS[®] devices (iPad[®], iPhone[®] and iPod Touch[®]),
- design in Cricut Craft Room[®],
- shop on Cricut.com,
- register products,
- post on $Cricut^{\circ}$ message boards, or
- share projects on Project Center.

If you've ever done any of these things, you've already created a Cricut ID. If you've forgotten or lost your password, you'll find a link on the sign in page to help you retrieve it.

Creating a Cricut ID

If this is your first time signing in, you'll be creating a Cricut ID. Enter your email address and choose a password. To use Design Space[®] on your iOS[®] device, you'll need to provide your first and last name and specify the country you live in. Since any purchases you make on your iOS[®] device are handled through your Apple ID, you don't need to specify your billing address or credit card number to make purchases with the Cricut Design Space[™] app.



Signing in with your Cricut ID

Step 1 Open the Cricut Design SpaceTM app.

Step 2 Tap the Account menu and tap "Sign In" with your Cricut ID.



Step 3 When you're signed in, the Account menu icon will display a checkmark in it.





Managing your Cricut ID account

If you'd like to update your account information, you can do so online.

Step 1 Go to www.cricut.com and sign in with your Cricut ID.



Step 2 Your first name will appear to indicate you are signed in. Click your name to view your account info.







Step 3 Use the navigation bar on the left to view the information associated with your Cricut ID. Each section has links that allow you to update your info.

Account Details				×
Account Info		Bill	Billing Info	
First Name:	Cricut	Cardholder name:	Cricut User	
Last Name:	User	Card number:	1234	
Country:	United States	Card expiration date:	6/1/2016	
Email / Cricut ID:	cricutuser@cricut.com	Card type:	Visa	
Password:	•••••			
				EDIT ACCOUNT