

Safety Instructions, FCC Statement & Warranty


IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS
READ THIS ENTIRE DOCUMENT PRIOR TO OPERATING
CRICUT EASYPRESS™ 2.

For more safety and compliance information go to www.cricut.com/safety

Key:

 HOT SURFACE: Ceramic plate and stand are hot while in use.

 CAUTION: Use as directed. Hot surfaces may scorch or burn.

Safety Instructions:



WARNING: This Cricut EasyPress 2 (Device) operates at high temperatures that can cause burns or other injury. Use with extreme caution.

CAUTION: Risk of electric shock. Do not open, modify, or otherwise tamper with Device.

Always turn Device OFF before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect Device from the electrical outlet; instead, grasp the plug and pull to disconnect Device.

Save these instructions.

Do not immerse in water or use in wet conditions.

Cricut EasyPress 2 is intended for household and indoor hobby use only:

- be careful when using Device in places where there are combustible or heat reactive materials;
- be aware that heat may be conducted to combustible materials that are out of sight;
- do not apply to the same place longer than recommended;

- always place Device on its stand after use and allow it to cool down before storage;
- ensure Device and stand are situated on a flat, stable surface;
- do not leave Device unattended when it is switched on; and
- unplug Device when not in use.

This Device is not intended for use by persons (including children) with reduced physical, sensory or cognitive capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of Device by a person responsible for their safety. Children should be supervised to ensure that they do not play with Device. If the power cord is damaged, do not operate Device.

The power cord should be positioned so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children). Use care not to allow the cord to touch the heated surface. Coil the cord loosely in the handle area when storing.

Do not operate if Device is damaged.

CAUTION: To provide continued protection against risk of electric shock, connect to properly grounded outlets only. Extension cords used with Device should be properly configured and capable of carrying the electrical load.

Auto shutoff occurs after 10 minutes of inactivity, after pushing any button, or after the timer beeps. If Device has to cool to reach a lower temperature, the auto shutoff 10-minute countdown starts after Device has reached the set temperature. This may take additional time.

WARNING: This Device must be placed on its stand when not in use.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

SAVE THESE INSTRUCTIONS

MODEL: CHP180B1, CHP130B2, CHP180B2, CHP220B2
RATING: AC110-130V 60Hz 1150W

MODEL: CHP220B2
RATING: AC110-130V 60Hz 1350W